

devolo

Home Control Room Thermostat



first steps

Thank you for placing your trust in this devolo product.

Carefully read all instructions before setting up the device and store the instructions for later reference.

Icons



Very important note. Failure to observe this note may result in damage.



Important note that should be observed.



Background information and configuration tips for your device.

Intended use

Use the Home Control Room Thermostat as described in these instructions and in the Home Control Room Thermostat User Manual. Please follow the safety instructions to help to prevent damage and injuries.



Except for occasional battery replacement, the Home Control Room Thermostat is completely maintenance-free. Otherwise, the device contains no user-serviceable parts!

CE conformity



When used as intended, the product conforms to the basic requirements of the directives 2014/53/EU, 2014/35/EU and the other relevant provisions of the Radio and Telecommunications Terminal Equipment Act (FTEG) and is designed for use in the European Union, Switzerland and Norway. A printout of the CE declaration is included.

devolo Home Control

Home Control (also known as home automation) refers to the specific control of electrically operated household devices. The Home Control system by devolo uses the Z-Wave™ wireless standard.

A Home Control system requires a Z-Wave™-compatible control unit such as the Home Control Central Unit from devolo. Use its Home Control portal to coordinate the Home Control Room Thermostat and other Home Control devices. You can access the Home Control Central Unit through the **my devolo app** or **www.mydevolo.com** in a browser.



For more information about setting up the Home Control Central Unit, please refer to the installation guide and/or Home Control online help.

Accessing the Home Control Central Unit via the my devolo app (for smartphone/tablet)


Open the **my devolo app** ➤ **Home Control** and select your **Home Control Central Unit**.

Accessing the Home Control Central Unit via web browser (PC/laptop)

At **www.mydevolo.com** ➤ **Home Control** select your **Home Control Central Unit**.



For more information on the control and configuration of all devolo Home Control devices, as application examples, please refer to the Home Control online help.

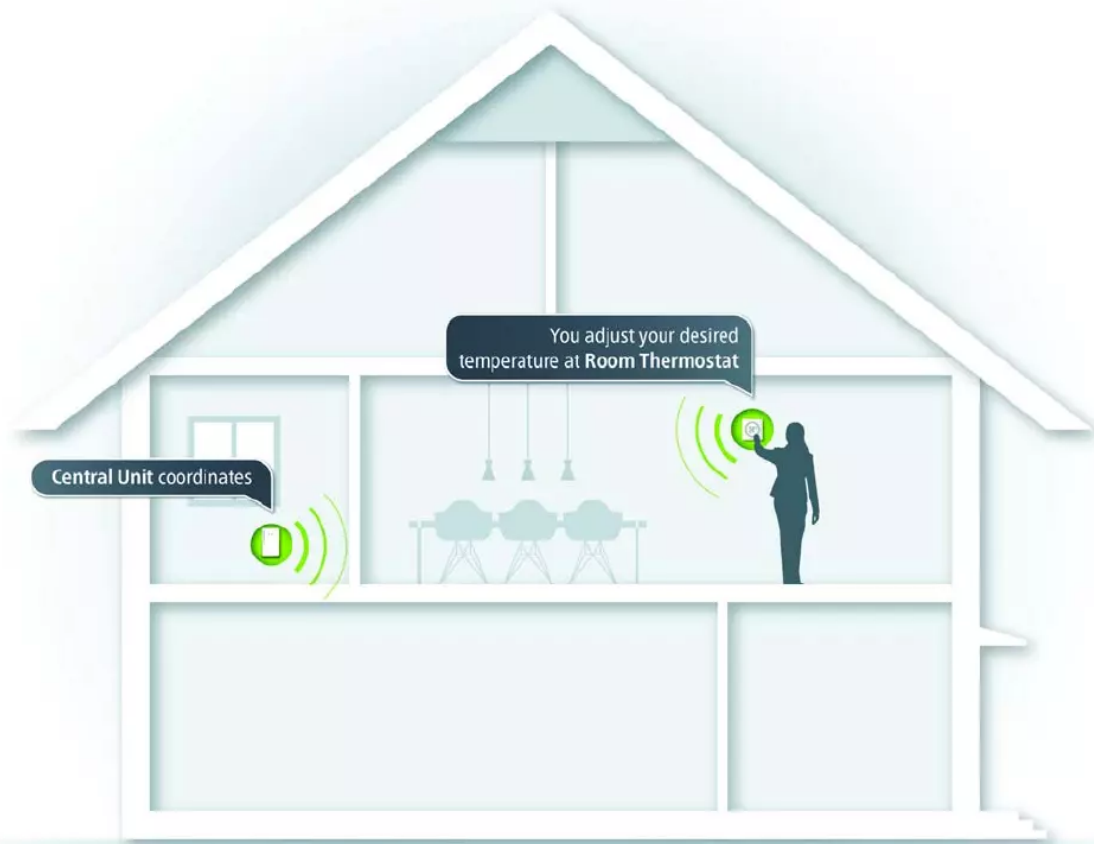

The Home Control Room Thermostat

Room temperature is controlled electronically, e.g. via the Home Control Central Unit (see section **Home Control** on page 3) or manually via the navigation buttons on the thermostat. In the latter case the Home Control Room Thermostat sends a change notification to the control unit, e.g. the Home Control Unit. In addition to the target temperature, the display shows the status of the respective battery, the connection and any keypad lock that may be in effect.



For more detailed descriptions of the Home Control Room Thermostat functions, refer to the Home Control online help.

Batteries



Always keep batteries away from open flame and high temperatures. Avoid direct sunlight and radiant heat!

Always remove all batteries from battery-operated devices that are only in storage and are not in use. Old batteries can leak and damage the device!

Do not use rechargeable batteries!

When inserting the batteries, ensure that the polarity is correct. Using the batteries incorrectly can damage the device!



The Home Control Room Thermostat uses commercially available AA alkaline batteries. For more information on replacing the battery, please refer to the Home Control online help.

Installing the Home Control Room Thermostat




If installing to a wall using screws, make sure that no gas, water or power lines are in the wall get damaged. There is a danger of electric shock!



Only use the Home Control Room Thermostat indoors.

- ① Disconnect the housing backplate, which also acts as both a holder and battery compartment cover, from the device by pushing it down and away.

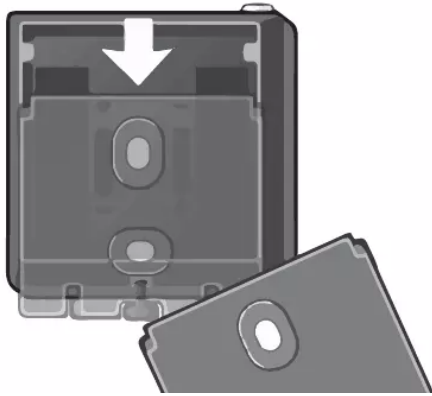

- ② Then, based on the template on the housing backplate, drill holes into the desired location and attach the housing backplate in the correct mounting position using the included screws.
- ③ Remove the black battery tab inside the Home Control Room Thermostat to establish battery contact.

9

Registering the Home Control Room Thermostat on the control unit (e.g. Home Control Central Unit)

⑤ After you have successfully installed the Home Control Room Thermostat, continue with its registration on the control unit.

⑥ When you plug in the **Home Control Central Unit** from **devolo**, follow the description in the section **devolo Home Control** on page 3 to call up your **Home Control Central Unit** and select **Devices**

Add device ➡ **devolo Home Control Room Thermostat**. Follow the instructions there to log into your Home Control Central Unit.

From now on, you can take electronic control conveniently using the Home Control portal of the Central Unit.

For more information on the control and configuration of all

*devolo Home Control devices,
as well as application examples, please
refer to the Home Control
online help.*

Service and warranty

Warranty: 3 years

If your devolo device is found to be defective during initial installation or within the warranty period, please contact the vendor who sold you the product. The vendor will take

The complete warranty conditions can be found at

.

care of the repair or warranty claim for you.

Disposal

Neither the Home Control Room Thermostat nor the batteries may be disposed of with the household waste. Instead, please return these at no charge at your municipal collection point or at the retailer (e.g. specialist shop).

Great Britain 0203 024 18 38
(national rate) support@devolo.co.uk

Sweden 0077 1400 480 (national rate) support@devolo.se

Finland 972 519 125 (national rate) support@devolo.fi

Norway 81 500 174 (national rate) support@devolo.com

Denmark 070 136 001 (national rate) support@devolo.dk

Other countries +49 241 70 525 18
(international rate) support@devolo.com

