

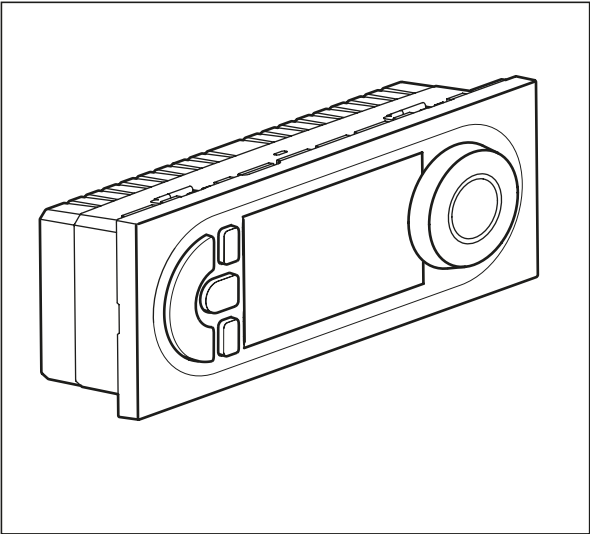
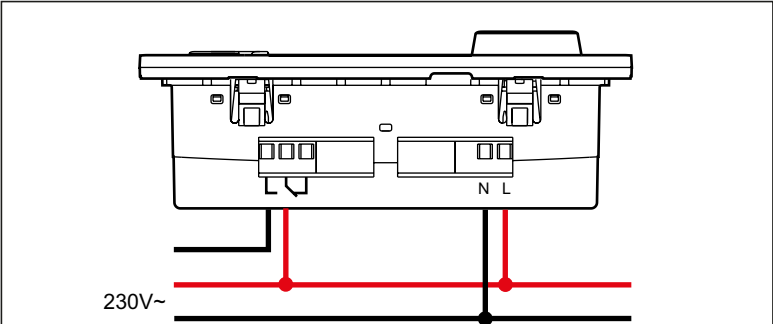


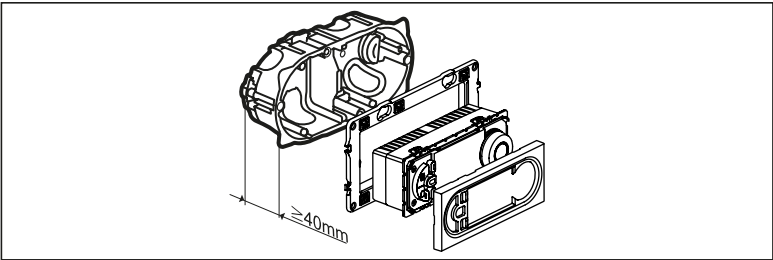

Technical data		
Supply voltage:	230V 50/60Hz	
Power consumption:	1 W	
Relay output:	1 changeover contact 8A 250V~ cos φ = 1	
Accuracy:	± 1 s /day, day under typical installation conditions	
Wire cross-sections:	single strand	multi strand
	1,5...4 mm²	1,5...2,5 mm²
Programs (saved by EEPROM)	4x predefined, 1x individual	
Running reserve:	100h for all settings	
Range of adjustment:	+7°C ... +30°C	
Frost protection temperature:	+7°C	
Storage temperature:	- 10°C to +60°C	
Ambient temperature	- 5°C to +50°C	
Operating principle:	Typ 1.B. EN 60730-1	
Energy class	IV = 2%, EU 811/2013	

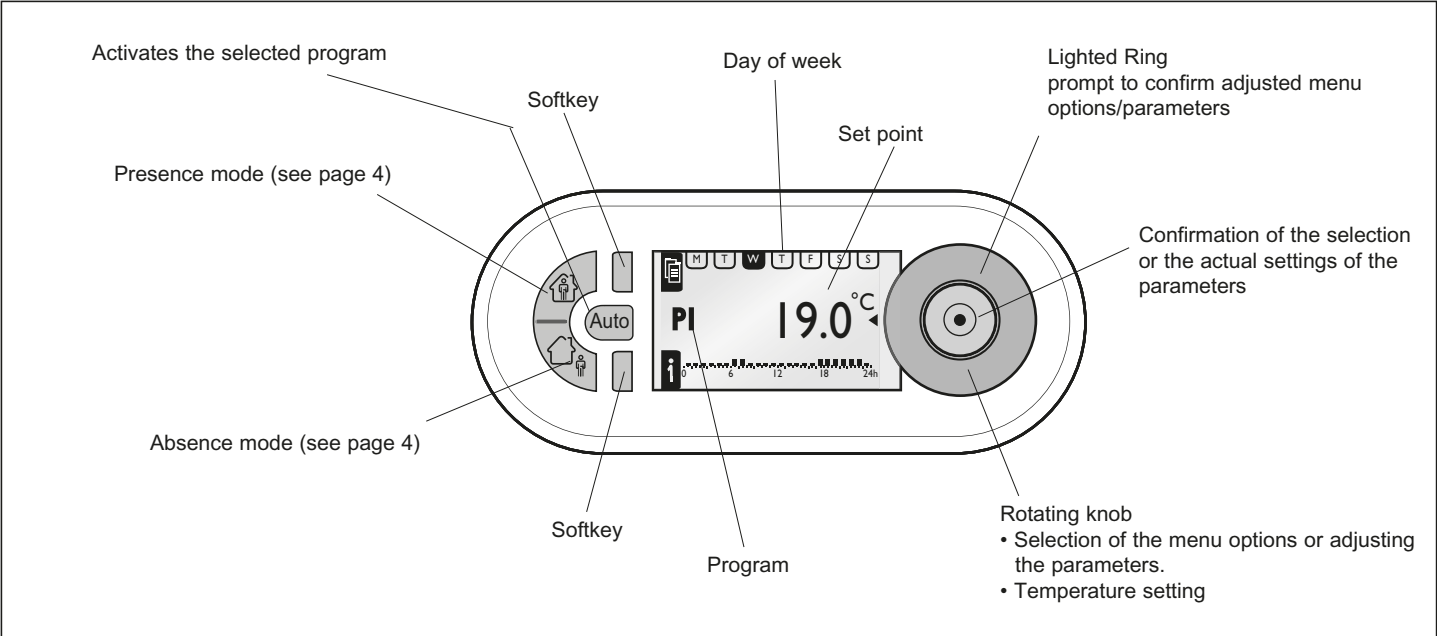

Softkeys

- Displays the MENU
- Back
- Information
- Adjust number of days (1-30) of absence and presence-mode

Use the same power supply phase for supply and relay.
For an optimal temperature control it is advisable to use a contactor when operating with a load greater than 4A.

MENU					
SETUP (PARAMETRAGE)					
	LANGUAGE (LANGUE)	ENGLISH / DEUTSCH / FRANCAIS / ESPANOL / NEDERLANDS			
	DATE/TIME	DATE	TIME	SUMMERTIME	EUROPE, US NONE, USER DEFINED
	TEMP. -SETTINGS	T° COMFORT	T° REDUCED		
	WALL COMPENS.	+ 0.0°C			
	PRESENCE TIME	6-22 O'CLOCK	0-24 O'CLOCK		
	DISPLAY	CONTRAST	BRIGHTNESS		
PROGRAMMS		Symbols 3d Presence mode - with indication of the residence days 3d Absence mode - with indication of the absence days 3d Absence-frost - with indication of the absence days Heating engaged manual operating mode actual temperature reduced temperature comfort temperature			
P1- OFFICE	M T W T F S S 08:00 - 19:00				

Symbols



3d Presence mode - with indication of the residence days



3d Absence mode - with indication of the absence days



3d Absence-frost - with indication of the absence days



Heating engaged



manual operating mode



actual temperature




reduced temperature




comfort temperature

Reset

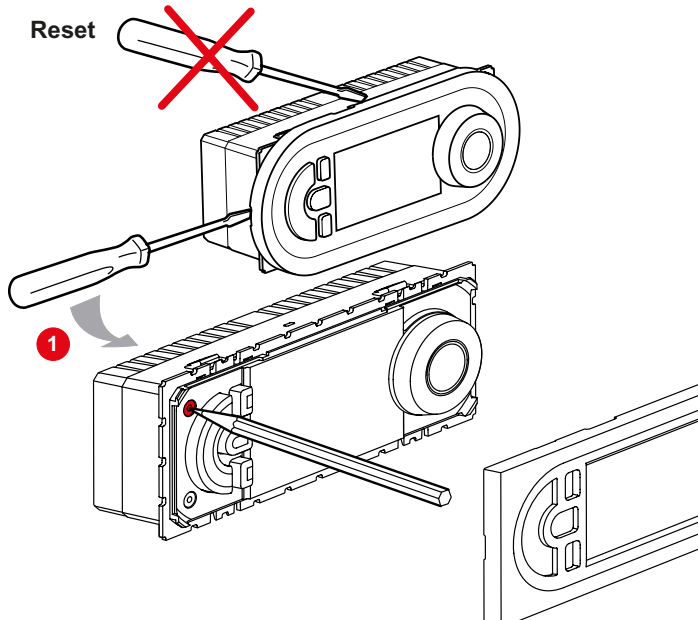


Program information

AUTO

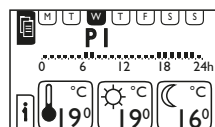


Manual regulation


Modifies the setpoint directly in steps of 0,5 °C; this action doesn't affect the chosen mode. With the next automatic switching, either due to a program or because of a return to the auto mode, the set-point is set back to the pre-selected value.

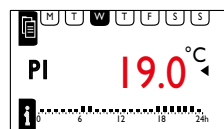


Select language

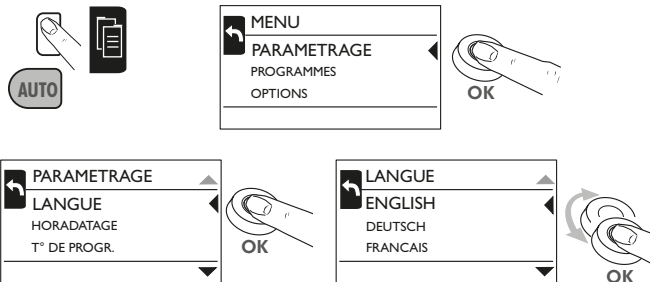

Time, date and summertime (Daylight saving time)

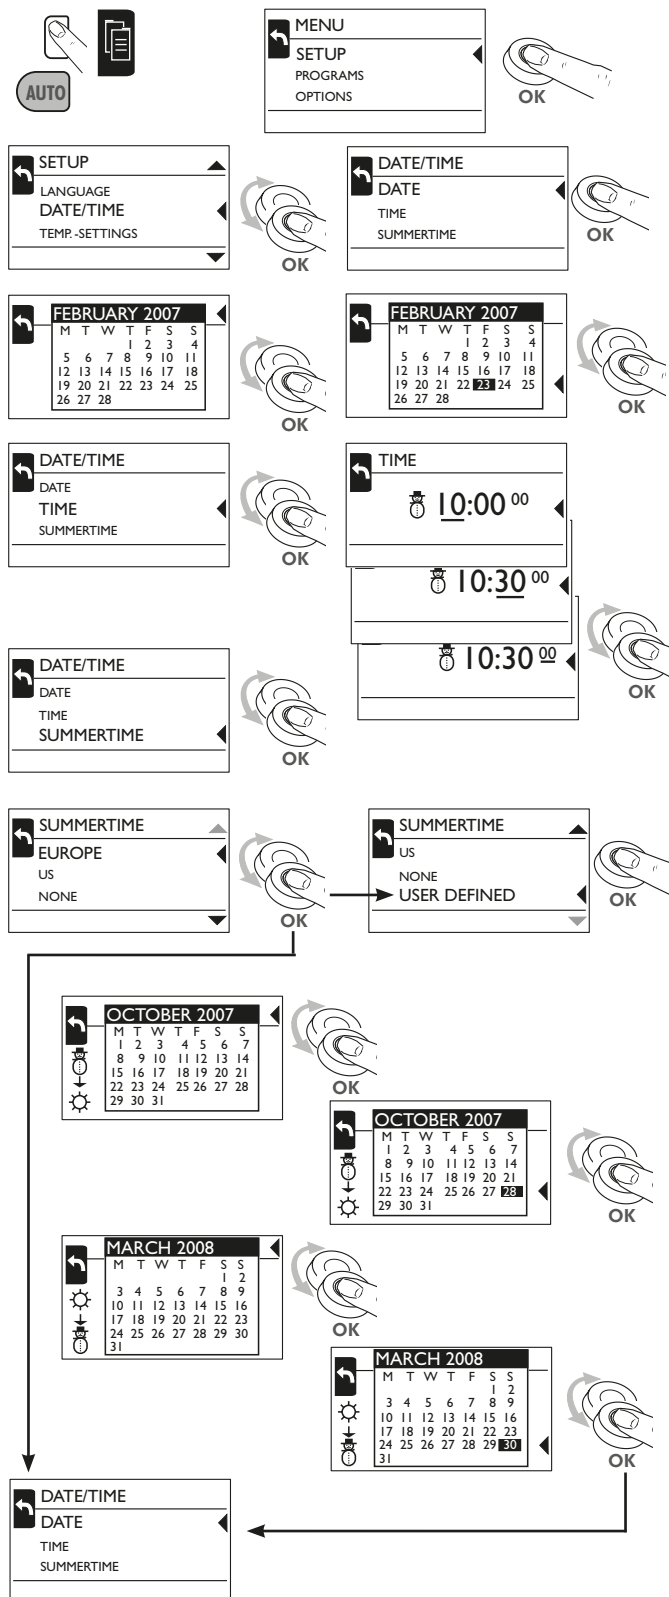


Temperature setting

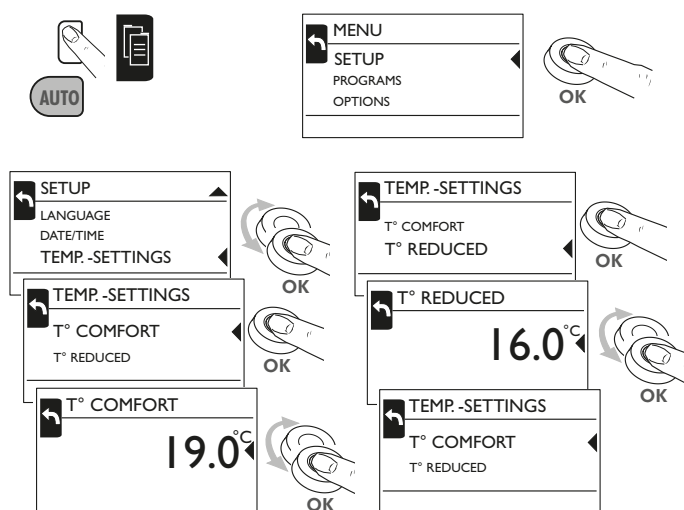


Comfort time when present

Comfort range setting

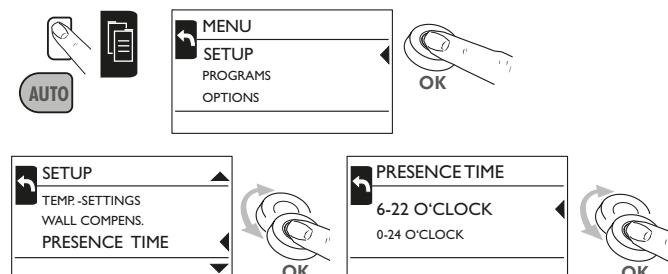


Wall compensation




The wall compensation enables the difference to be adjusted if the temperature values differ from the room temperature.

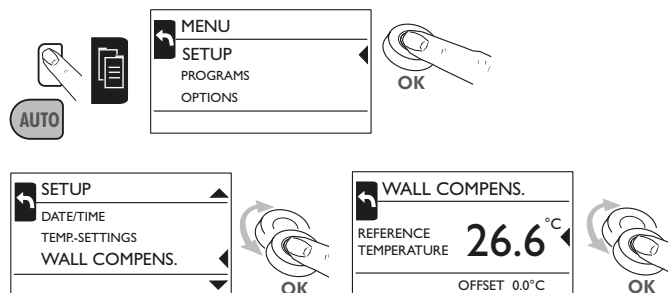

Contrast/brightness adjustment

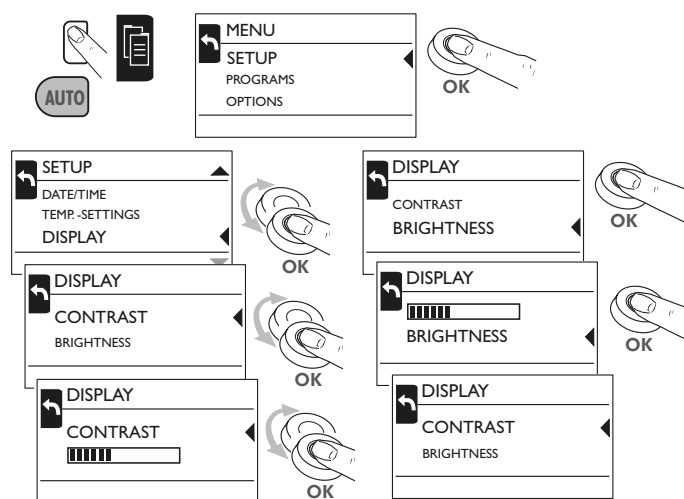

Presence mode

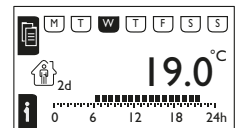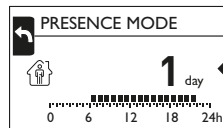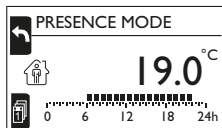

Activates the comfort level between 6:00-22:00/0:00-24:00, the rest of the day the reduced level is active. This mode can be initiated for an unlimited time or for a number of days between 1 and 30.

If button is not pressed for 20s or button OK is pressed after the display of presence mode screen, an unlimited number of days will be set.

Adjust number of days (1-30) of presence-mode




After expiration of the adjusted days or pressing the key AUTO returns to AUTO mode.

Absence mode



During the absence mode the reduced

or the frost protection level is activated throughout the day. The user can choose which level is actually used. This mode can be initiated for an unlimited time or for a number of days between 1 and 30.


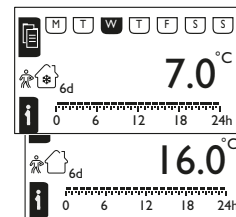
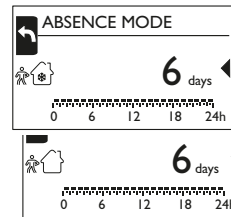
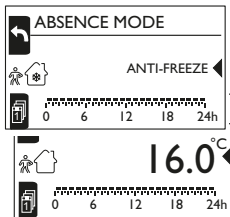


If button is not pressed for 20s or button OK is pressed after the display of presence mode screen, an unlimited number of days will be set.

Adjust number of days (1-30) of absence-mode

After expiration of the adjusted days or pressing the key AUTO returns to AUTO mode.

 Modify programs Changes ON/OFF-times

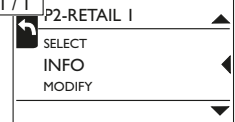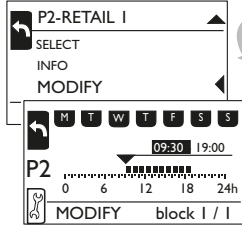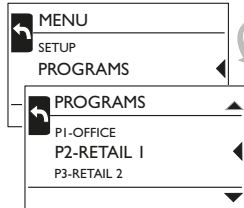

Create program 5

