

tekmar® User Brochure

tekmarNet®2 House Control 406



U 406

12/11

Alternative Energy

Replaces: New



This brochure includes details about how to view and adjust settings within the tekmarNet® House Control 406. Advanced operational information is available in the Installation and Operation Manual D406. Please visit www.tekmarcontrols.com for more detailed information on this or any other tekmar product.

This control operates a heat pump and backup boiler to provide hot or chilled water to a storage tank. Floor cooling is available with or without a humidity sensor. A backup boiler is able to provide heat for domestic hot water, setpoints, or as a backup to the storage tank.

Display


Menu Field

Displays the current menu



Status Fields

Displays the current status of the control's inputs, outputs and operation. Most symbols in the status field are only visible when the VIEW Menu is selected

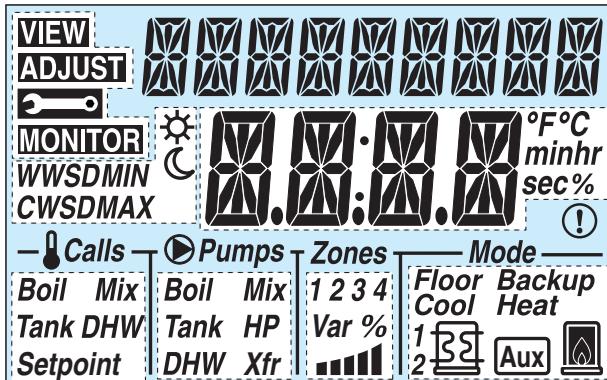

Item Field

Displays the name of the selected item



Number Field

Displays the current value of the selected item

Symbols

	CALLS Displays any call for heat or cool the control is receiving.		HEAT PUMP Heat pump stage 1 or 2 is operating.
	PUMPS Displays any pump currently operating.		AUXILIARY An auxiliary backup heat source is currently operating using the Backup relay.
	ZONES Displays if an on-board zone is operating.		BOILER Indicates that the boiler is operating (flashing flame indicates boiler is igniting).
	VARIABLE SPEED PUMP OUTPUT Displays percent output of the variable speed pump.		FLOOR Radiant floor cooling is currently active.
	WWSD / CWSD The system is currently in Warm Weather Shut Down or Cold Weather Shut Down.		BACKUP Backup heat source is required to assist in heating the tank sensor to its target.
	MIN / MAX Heat pump is prevented from operating due to high or low return water temperature.		COOL / HEAT The heat pump is operating in either cool or heat mode.
	OCCUPIED Indicates that a User Switch or Timer has put the system into Occupied.		°F °C MINUTES HOURS SECONDS % Units of measurement for current number.
	UNOCCUPIED Indicates that a User Switch or Timer has put the system into UnOccupied.		WARNING Displays if an error exists on the system.





Navigating The Display

The 406 uses a simple user interface to accomplish a variety of functions. The four buttons beneath the display are used to change the menu, sort through items, and adjust each setting as required.

Step 1 - Select A Menu

The menu is displayed in the Menu Field at the top left side of the display. Four menus are available: View, Adjust, Monitor and Toolbox (identified by the wrench symbol).

- Press the Menu button to switch between menus.

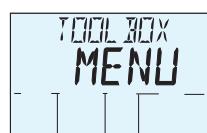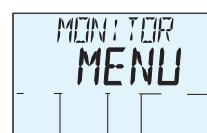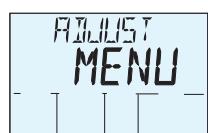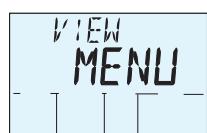

Step 2 - Select An Item

Each menu contains a list of Items that can be viewed and, in some cases, adjusted. Press the item button to scroll through the list in each Menu.

- To view the next available item, press and release the Item button.
- To view the previous item, hold down the Item button, and press and release the Up button.



View Menu Items

- Outdoor
- Boiler
- Boil Target
- Boiler Modulation

Adjust Menu Items

- Mode
- WWSD
- Units

Monitor Menu Items

- Outdoor Low
- Outdoor High
- Run Time Heat Pump 1
- Run Time Heat Pump 2
- Run Time Boiler

Toolbox Menu Items

- Type 406
- Access







Step 3 - Adjust The Item

- The Up and Down buttons are primarily used for adjusting settings. To adjust a setting:
- Select the appropriate menu using the Menu button.
 - Select the item using the Item button.
 - Use the Up or Down button to make the adjustment.

View Menu


The View menu items display the current operating temperatures and status information of the system.

Item	Description
	OUTDOOR Current outdoor air temperature as measured by the outdoor sensor. The outdoor air temperature is shared to all thermostats in the tekmarNet® system.
	BOILER Current boiler supply water temperature as measured by the boiler sensor. Note: This item is only available when a boiler water temperature is selected.
	BOILER TARGET The boiler target is the temperature the control is currently trying to maintain at the boiler supply sensor. “---” is displayed when no heat is required for boiler zones. Note: This item is only available when a boiler water temperature is selected.
	BOILER MODULATION Current percent modulation of the boiler's burner. Note: This item is only available when a modulating boiler is selected.

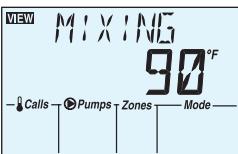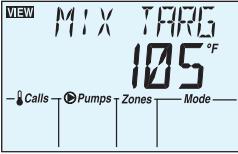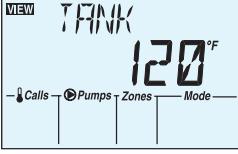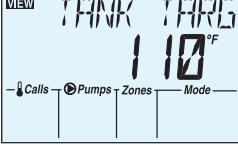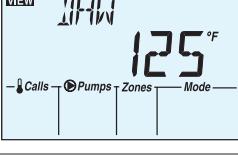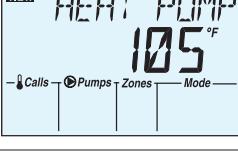Item	Description
	MIXING Current mix supply water temperature as measured by the mix sensor. Note: This item is only available when a mix water temperature is selected.
	MIX TARGET The temperature the control is currently trying to maintain at the mix sensor. “—” is displayed when no heat is required for mix zones. Note: This item is only available when a mix water temperature is selected.
	TANK Current tank supply water temperature as measured by the tank sensor.
	TANK TARGET The temperature the control is currently trying to maintain at the tank sensor. “—” is displayed when no heat is required for tank zones.
	DOMESTIC HOT WATER Current Domestic Hot Water tank temperature as measured by the optional DHW sensor. Note: This item is only available when a DHW sensor is installed.
	HEAT PUMP Current heat pump return water temperature as measured by the HP Return sensor.

Adjust Menu

The Adjust menu items are the programmable settings used to determine how to operate the system.

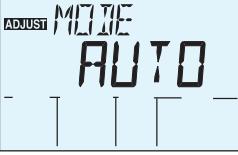Item	Description
	MODE Select one of the following modes to operate the heat pump and backup. <ul style="list-style-type: none"> AUTO - Automatic switchover between heating and cooling. COOL - Heat pump only operates to satisfy cooling calls. A backup boiler satisfies DHW or Setpoint calls. HEAT - Heat pump only operates to satisfy heating calls. A backup boiler satisfies any DHW, Setpoint, or Boil calls, and provides backup to Tank and Mix calls. BKUP - The heat pump is disabled and the backup boiler satisfies any DHW, Setpoint, Tank, Mix or Boil calls. OFF - Both the heat pump and backup are disabled.
	WWSI Warm Weather Shut Down is the outdoor temperature at which the control will no longer turn on the heat pump or backup for space heating. <ul style="list-style-type: none"> 40 to 100°F (4.5 to 38°C)
	UNITS Selects units for temperature display. <ul style="list-style-type: none"> °F or °C

Monitor Menu

The Monitor menu provides information about the systems operation and performance.

Item	Description
	OUTDOOR LOW Records the lowest outdoor temperature since the item was last reset. • Press and hold the Up and Down buttons while viewing to reset.
	OUTDOOR HIGH Records the highest outdoor temperature since the item was last reset. • Press and hold the Up and Down buttons while viewing to reset.
	RUN TIME (HEAT PUMP STAGE 1) The total 'on' time of the Y1 relay since the item was last reset. • Press and hold the Up and Down buttons while viewing to reset.
	RUN TIME (HEAT PUMP STAGE 2) The total 'on' time of the Y2 relay since this item was last reset. • Press and hold the Up and Down buttons while viewing to reset. Note: This item is only available when a second stage heat pump is available.
	RUN TIME (BOILER) The total 'on' time of the backup relay since the item was last reset. • Press and hold the Up and Down buttons while viewing to reset. Note: This item is only available when a backup boiler is available.

Toolbox Menu



The Toolbox menu is a location for system information and test functions.

Item	Description
	TYPE AND SOFTWARE VERSION Displays the type number of the product, followed by the current software version beneath.
	ACCESS LEVEL Selects the access level of the control. Note: When set to USER, all thermostats are locked and the number of thermostat settings available are reduced.

System In Away

The User Switch 479 allows for one-touch setback. This feature allows a user to lower the temperature of all thermostats on the network with the simple push of a button.

When the 'Away' button is selected, the House Control 406 will indicate that it is in the Away scene by saying 'System in Away' in the View menu.

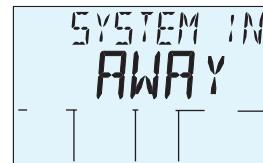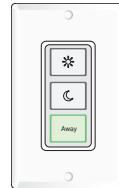

tekmar Control Systems Ltd., Canada, tekmar Control Systems, Inc., U.S.A. Head Office: 5100 Silver Star Road, Vernon, B.C. Canada V1B 3K4, 250-545-7749, Fax. 250-545-0650 Web Site: www.tekmarcontrols.com

