

TYBOX 5000

FR	Thermostat d'ambiance filaire
EN	Hard-wired room thermostat for boiler
DE	Drahtgebundenes Raumthermostat
NL	Kamerthermostaat met draad
ES	Termostato de ambiente filar
IT	Termostato ambiente



FR	<u>Notice d'utilisation</u>	NL	<u>Gebruiksaanwijzing</u>
EN	<u>Instructions for use</u>	ES	<u>Instrucciones de uso</u>
DE	<u>Bedienungsanleitung</u>	IT	<u>Istruzioni per l'uso</u>


CONTENT

EN


1/ Description	12
2/ Use	13
3/ Replacing the batteries	15
4/ Troubleshooting	15
5/ Compatible options	16

1/ DESCRIPTION

Room unit

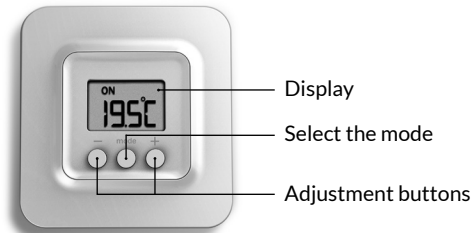

Display

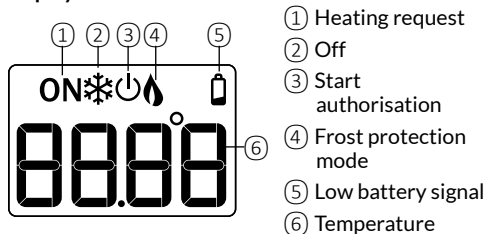

2/ USE

- ① Press any button to activate the display screen.

The current mode will be displayed:


ON = start authorisation

⏻ = Off

❄ = Frost protection


To modify it, press Mode.

- ② From the ON mode, press + or - to display the temperature setting and modify it.

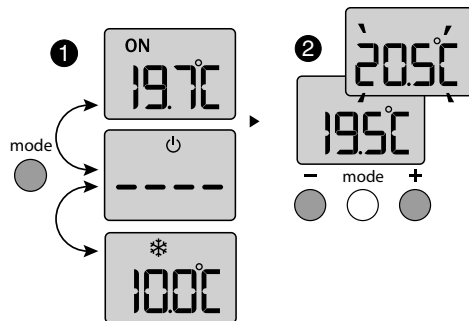

2/ USE

- 3 Press Mode or wait 5 seconds.

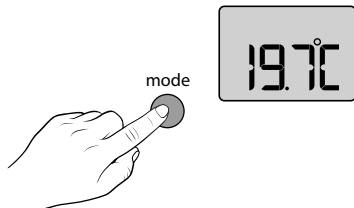

When switching over from the  mode to ON mode, the setting's default value is restored: 20°C.

3/ REPLACING THE BATTERIES

EN



4/ TROUBLESHOOTING

If the screen displays '----' when you press a button. Access to the settings is locked.



If the screen shows the  symbol. The batteries are spent. Replace the batteries

5/ COMPATIBLE OPTIONS

Association with a TYDOM 1.0 home automation box

Your TYBOX 5000 can be used as a connected thermostat, if it is associated with a TYDOM 1.0 home automation thermostat. Remote control and programming from a tables or smartphone with the TYDOM application.

TYBOX 5000 pack with TYDOM 1.0



EN

Association with a door/window magnetic contact

If a door/window magnetic contact (e.g. window) is associated with the TYBOX 5000, the heating switches to Frost Protection mode when an open window is detected.

TYBOX 5000 with the MICRO COX door/window magnetic contact





www.deltadore.com



2704642 Rev.03