

harmoni



harmoni pro series thermostat

Instruction manual



Download the App

The Harmoni Pro+ is Wi-Fi enabled and can be controlled via an app on a smartphone.

The app is compatible with iOS & Android, and can be downloaded using the QR code opposite.



Contents

Introduction	4
Technical specifications	4
Installation	5
Wiring instructions	6
Thermostat symbols	7
Wi-Fi connection	8
Operation & functions	10
Troubleshooting	16
Dimensions	17

Introduction

The **Harmoni Pro series** is an intuitive programmable thermostat used to control either electrical or water underfloor heating systems.

It will keep the room at a comfortable temperature whilst minimising energy use. Install the app on a smart phone to control the heating system remotely via the Wi-Fi thermostat.

Technical specifications

	Electric	Water
Supply voltage	85–265Vac 50/60Hz	85–265Vac 50/60Hz
Standby power	<1W	<1W
Max load	16A	3A
IP class	IP21	IP21
Cable specification	≤2.5mm ²	≤2.5mm ²

Installation

STEP 1



Loosen the fixing screw located in the bottom of the thermostat to remove the front panel

STEP 2



Connect the thermostat according to the wiring instructions on page 6

STEP 3




Insert the back panel into the wall box and fix with the screws provided

STEP 4




Align the tops of the front and back panel to refit these two parts together. Then retighten the fixing screw

Wiring instructions

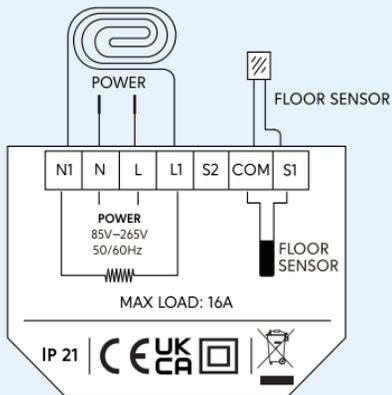

Electric underfloor heating
16A


Ensure power is disconnected when wiring

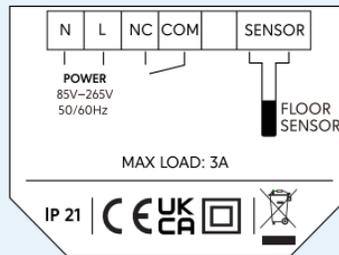

Water underfloor heating
3A

Note: Please keep the maximum load to around 90% of 16A to prolong the lifetime of the system

Thermostat symbols

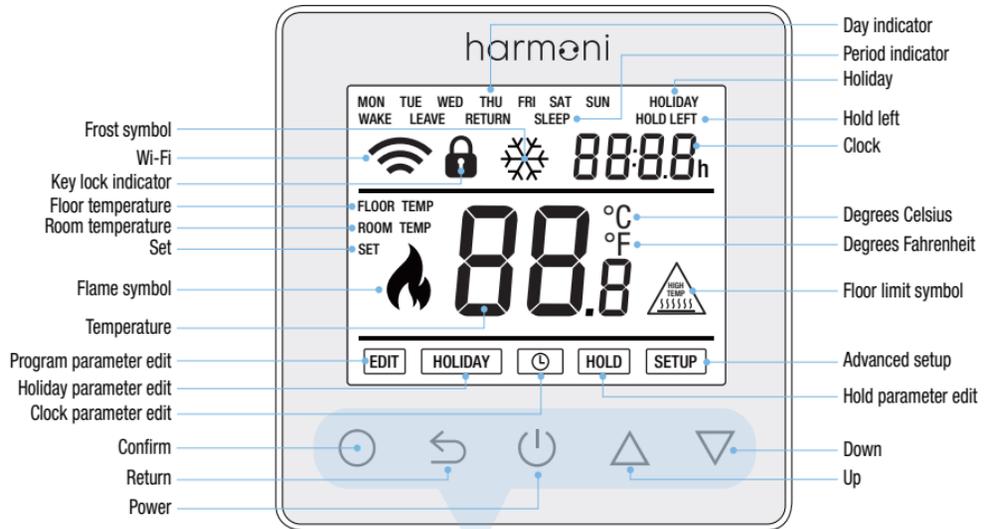


TOUCH CONTROL PANEL

Wi-Fi connection



1

Scan the QR code or download from the APP store/Google Play

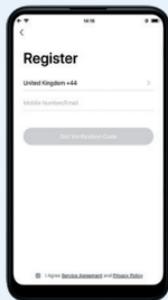

2

Register and log in to the APP with mobile number/ email address



3

Click 'Add Device' or '+' on the top-right to add device



4

Click 'Wi-Fi thermostat'

Note: Please read and agree to the 'Privacy Policy & Service Agreement' before registration.



5

Operate thermostat. If the Wi-Fi icon quickly flashes, Click 'Press to connect'



6

Enter Wi-Fi password then click 'Confirm'



7

If device is successfully added, device name can be changed and region set. Then click 'Done'



8

Check the actual temperature and set temperature etc., on the control interface

Note: If failed, confirm the Wi-Fi is 2.4G version and check the Wi-Fi signal, then, use the 'AP mode' in the top right to connect again.

Operation & functions

ON/OFF

Press  to turn On/Off.

Note: When frost protection is active, the thermostat will maintain the frost protection temperature even when the power is off.

TEMPORARY OVERRIDE TEMPERATURE

The temporary override temperature function is only valid at the current event and it will not be saved.

Press   to set temporary override temperature

Press  to confirm, the screen will return to showing the current temperature

KEY LOCK

Lock all keys to prevent the settings from being changed. On the touch control panel, press and hold  for 3 seconds to lock or unlock all the keys.

SET THE TIME

Note: If the thermostat is a Pro+ (Wi-Fi enabled), it will update the time automatically after connecting to Wi-Fi.

Press  to confirm, then the  will flash

Press  to enter Day setting

Press  to set Day

Press  to enter hour setting

Press  to set hour

Press  to enter minute setting

Press  to set minutes

Press  to confirm and go back to the day setting screen

Press  twice to go back to the current temperature screen

HOLIDAY MODE

In Holiday Mode, the thermostat will maintain the set temperature until the holiday time ends.

Press  to confirm, then the  will flash

Press  to select 

Press  to enter holiday days setting

Press  to set holiday days

Press  to enter temperature setting

Press  to set required temperature

Press  to confirm and back to the current temperature screen

Note: Set the holiday days to zero or double press  to cancel Holiday Mode.

HOLD MODE

In Hold Mode, the thermostat will hold the set temperature until this mode is cancelled.

Press  to confirm, then the  will flash

Press  to select **HOLD**

Press  to enter Hold Mode ON/OFF setting

Press  to set Hold Mode ON

Press  to enter temperature setting

Press  to set temperature

Press  to confirm and back to the current temperature screen

Note: Set hold to OFF or double press  to cancel Hold Mode.

EDIT SETTING

Edit Setting sets and changes the parameters if Holiday Mode or Hold Mode aren't chosen. The thermostat will then run to the Edit parameters.

Press  to confirm, then the  will flash

Press  to select **EDIT**

Press  to enter day selection in edit setting

Press  to select a day

Press  to enter the event selection of the day

Press  to select an event

Press  to select the event's start time

Press  to set the hour of the start time

Press  to enter the minute setting

Press  to set the minute of the start time

Press  to enter the temperature setting

Press  to set the temperature

Press  to confirm and go back to the event selection of the day

Press  twice or double press  to go back to the current temperature screen

DEFAULT PARAMETERS IN EDIT MODE

The table below shows the default parameters.

Day	Wake	Leave	Back	Sleep
Mon–Fri	07:00 22.0°C	08:30 19.0°C	17:00 22.0°C	22:00 19.0°C
Sat/Sun	08:00 22.0°C	08:30 22.0°C	17:00 22.0°C	22:00 19.0°C

ADVANCED SETTING

The thermostat provides advanced settings to suit a range of special situations which are normally set by a technician during initial installation.

Press  to confirm, then the  will flash

Press  to select 

Press  to enter advanced settings

Each setting can be accessed by pressing  then pressing  to adjust parameters

No.	Name	Default	Ranges
1	Room temperature calibration	0°C	-5°C to 5°C
2	Floor temperature calibration	0°C	-5°C to 5°C
3	Anti-freeze function	ON	OFF/ON
4	Anti-freeze temperature	5°C	-5°C to 5°C
5	Sensor selection	01: Floor sensor	00: Room sensor 01: Floor sensor 02: Both sensors
6	Floor temperature limit	30°C	20°C to 50°C
7	Temperature unit	00: °C	00: °C 01: °F
8	Output delay	00: 00s	00: 00s 01: 30s 02: 60s 03: 90s
9	Temperature deviation	01: 1°C	00: 0.5°C 01: 1°C 02: 2°C 03: 3°C
10	Reverse output	00: OFF	00: OFF 01: ON
11	Schedule	01: 5 +1+1	00: 7 01: 5+1+1
12	Adaptive function	00: OFF	00: OFF 01: ON
13	Reset	00: No	00: No 01: YES

- 1 **Room temperature calibration:** Calibrate the temperature detected by the room sensor.
- 2 **Floor temperature calibration:** Calibrate the temperature detected by the floor sensor.
- 3&4 **Anti-freeze function:** This option is ideal for warming plants and pets with a lower temperature.
 displays when the thermostat is switched off.
**It can also protect the pipework from freezing when using a water heating system.*
- 5 **Sensor selection:**
 - 00 Room sensor: Run by room sensor
 - 01 Floor sensor: Run by floor sensor
 - 02 Both sensors: Run by room sensor with floor temperature limit
- 6 **Floor temperature limit:** If both sensors are chosen, floor temperature limit must be set to protect floor.
- 7 **Temperature unit:** °C and °F can be selected.
- 8 **Output delay:** This option helps avoid inadvertent operation on heating.
- 9 **Temperature deviation:** Deviation is 1°C. The thermostat starts when the room temperature is 1°C lower than set temperature and stops when the room temperature is 1°C higher than the set temperature.

- 10 **Reverse output:** A function for the cooling system. When the temperature is 1°C higher than the set temperature, the cooling system will be disconnected, otherwise the cooling system will be connected.
- 11 **Schedule:** Select a weekly schedule for the Edit Setting. There are 2 options:
 - 7: Each weekday from Monday to Sunday can be set individually.
 - 5+1+1: Weekdays, Monday to Friday have the same events; Saturday & Sunday can be set individually.
- 12 **Adaptive function:** After several days of installation and use, the adaptive function learns that the required temperature has already been reached when the next event begins.
- 13 **Reset:** All parameters are restored to default value.

OPEN WINDOW DETECTION

This function only works when in Room Sensor or Both Sensors mode. When a window is opened, this function detects the sudden change in room temperature and automatically switches off the thermostat for 15 minutes.

Troubleshooting

If you are experiencing problems with your Harmoni thermostat please call our technical department on 01473 559088.


COMMON ERROR CODES

E1: Room sensor error

E2: Room sensor error

Dimensions

All dimensions are specified in mm.

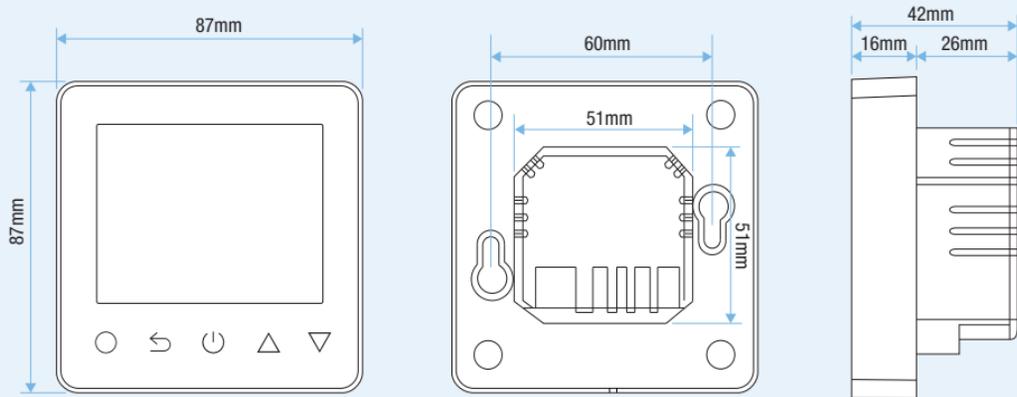

Harmoni product range

Discover Harmoni Heating's premium range of energy efficient, intuitive and well-designed heating solutions with clean, energy-saving technology at the heart of every product.

ELECTRIC RADIATORS



ELECTRIC TOWEL RAILS



ELECTRIC UNDERFLOOR HEATING



FROST PROTECTION



Visit www.harmoniheating.co.uk to see the full range of harmoni products



harmoni

01473 559088

www.harmoniheating.co.uk

Harmoni is a trading division of Edison House Trading Ltd