

ERT208

Operating manual

1. ON/OFF

- Press the On/Off button to activate/deactivate the thermostat.

2. Fan ON / Auto Fan

- Press the Fan button to switch between:
 - o Fan ON – the fan will work continuously - an arrow will appear next to the words “Fan ON”.
 - o Auto Fan - The fan will stop when there is no demand for cooling or heating - an arrow will appear next to the words “A.Fan”.

3. Modes

- Press the Mode button to switch between modes:
 - o Cool - an arrow will appear next to the word “Cool”.
 - o Heat - an arrow will appear next to the word “Heat”.
 - o Auto change-over – The thermostat will automatically switch between cooling and heating – according to the current temperature and the requested temperature - an arrow will appear next to the word “Auto”.
 - o Fan only – The arrows will disappear.

4. Adjust Temperature

- Use the SET buttons (“+” or “-”) to change the requested temperature.

5. Timer

Use the timer to turn the thermostat On or Off (opposite to current status) after a set number of hours (0-12 Hours).

- Press the Timer button – an arrow will appear next to the word “Timer”.
- Use the SET buttons (“+” or “-”) to adjust the number of hours.
- Press the Timer button again to return to normal display mode.

* The timer function will be cancelled in case of power failure.

6. Temperature Limits

- Press and hold the Mode button until the set-point temperature limit for cooling will appear on display. An arrow will appear next to the word “Cool”.
- Use the SET buttons (“+” or “-”) to adjust the set-point temperature for cooling.
- Press the Mode button again - an arrow will appear next to the word “Heat”.
- Use the SET buttons (“+” or “-”) to adjust the set-point temperature for heating.
- Press the Mode button again to return to normal display.

