

Guide de l'utilisateur

OTH3000-A (3000 W @ 240 Vca)

OTH4000-A (4000 W @ 240 Vca)

OTH5007 (5000 W @ 347 Vca)

Thermostat non programmable




Avertissements

L'installation de ce thermostat doit être effectuée par un électricien certifié et doit être conforme aux codes d'électricité locaux et nationaux en vigueur.



Puisque vous êtes un client important pour nous, s'il vous plaît, vous assurer de mettre le système de chauffage hors tension à partir du panneau électrique afin d'éviter tout risque de choc électrique!


Le thermostat doit être installé en série avec votre unité de chauffage. Raccorder directement le thermostat sur la source de tension va endommager l'unité.

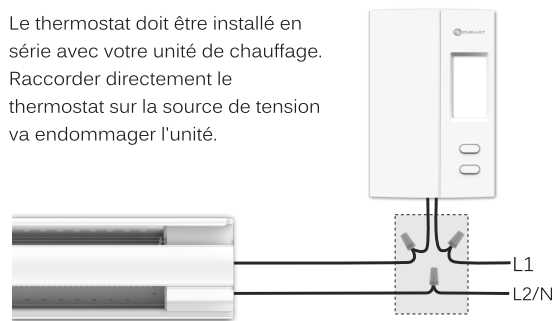


Note: Les fils de ce thermostat sont non polarisés.

Pour une performance optimale, un dégagement recommandé de 12 po (305 mm) au-dessus et dessous du thermostat et de 3 po (76 mm) de chaque côté du thermostat.

Votre thermostat OTH3000-A / OTH4000-A / OTH5007

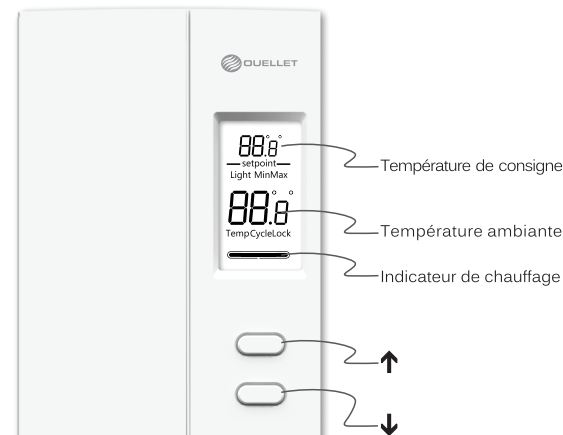

Installer votre thermostat

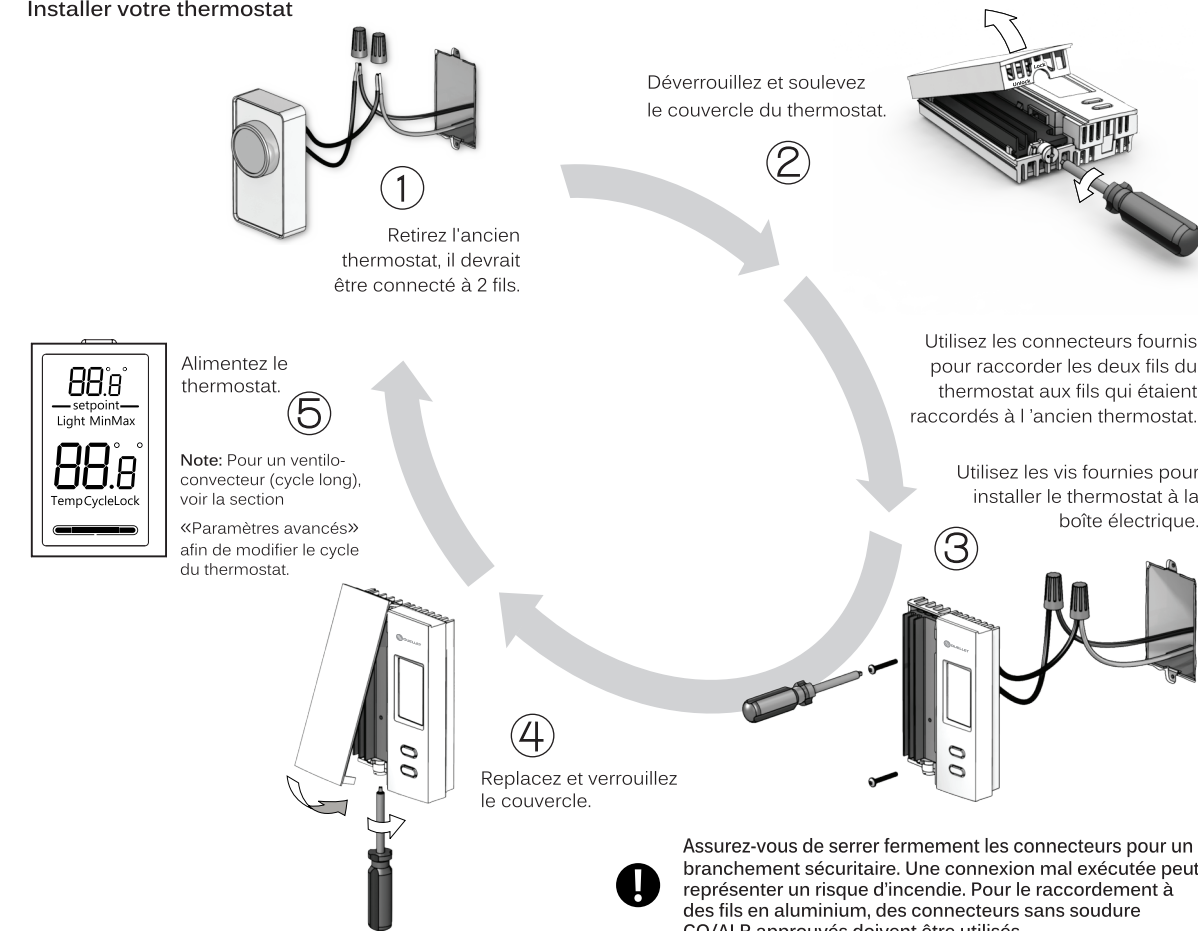

Paramètres avancés

Abaisser la température de consigne à son minimum et maintenir le bouton ↓ enfoncé pendant 3 secondes afin d'accéder au menu.



Appuyer sur le bouton ↑ ou ↓ afin de changer le réglage.

Appuyer sur les boutons ↑ et ↓ pour sélectionner le prochain paramètre.

Appuyer sur les boutons ↑ et ↓ pendant 3 secondes pour sortir du menu et retourner à l'affichage normal.

Ordre	Paramètres & réglages	Affichage
1	Format d'affichage de la température : °C ou °F (par défaut: °C)	 Temp
2	Rétroéclairage: OFF (actif pendant 6 sec. si un bouton est appuyé) / ON (toujours actif) (par défaut: OFF)	 Light
3	Consigne minimale: 5 °C - 30 °C (41 °F - 86 °F) (par défaut: 5 °C)	 Min
4	Consigne maximale: 5 °C - 30 °C (41 °F - 86 °F) (par défaut: 30 °C)	 Max
5	Longueur du cycle: SHT (cycle court pour plinthe électrique) / FAN (cycle long pour ventilo-convecteur (par défaut: SHT)	 Cycle
6	Verrouillage du clavier: OFF (désactivé) / ON (activé) (par défaut: OFF)	 Lock

Spécifications techniques

Plage de réglage : 5 °C à 30 °C (41 °F à 86 °F)
Plage d'affichage : 0 °C à 70 °C (32 °F à 99 °F)
Résolution : ± 0,5 °C (± 1 °F)
Entreposage : -20 °C à 50 °C (-4 °F à 122 °F)

Thermostat OTH3000-A

Charge maximale : 12,5 A / 1500 W @ 120 Vca, 50/60 Hz
12,5 A / 2600 W @ 208 Vca, 50/60 Hz
12,5 A / 3000 W @ 240 Vca, 50/60 Hz

Charge minimale : 1.25 A / 150 W @ 120 Vca, 50/60 Hz
1.25 A / 260 W @ 208 Vca, 50/60 Hz
1.25 A / 300 W @ 240 Vca, 50/60 Hz

Thermostat OTH4000-A

Charge maximale : 16.7 A / 2000 W @ 120 Vca, 50/60 Hz
16.7 A / 3465 W @ 208 Vca, 50/60 Hz
16.7 A / 4000 W @ 240 Vca, 50/60 Hz

Charge minimale : 1.25 A / 150 W @ 120 Vca, 50/60 Hz
1.25 A / 260 W @ 208 Vca, 50/60 Hz
1.25 A / 300 W @ 240 Vca, 50/60 Hz

Thermostat OTH5007

Charge maximale : 14.4 A / 4000 W @ 277 Vca, 50/60 Hz
14.4 A / 5000 W @ 347 Vca, 50/60 Hz

Charge minimale : 1.25 A / 346 W @ 277 Vca, 50/60 Hz
1.25 A / 434 W @ 347 Vca, 50/60 Hz

Compatible avec un système de chauffage électrique tel que:

- Plinthe électrique
- Convecteur (cycle court)
- Ventilo-convecteur (cycle long)

Garantie limitée de trois (3) ans

OUELLET CANADA INC. garantit les composantes du OTH3000-A, OTH4000-A & OTH5007 contre les vices de matériel ou défauts de fabrication pour une période de 3 ans en fonction d'un usage et d'un entretien normaux à compter de la date d'achat et sur présentation d'une facture attestant cette date. La responsabilité de Ouellet Canada inc. est limitée au remplacement du produit (appareil) seulement et ne comprend d'aucune façon le coût de branchement ou de la pose de l'appareil ou pièces de remplacement.



Pour toutes questions sur ces produits,
veuillez joindre notre service d'assistance technique:

180, 3e Avenue, L' Islet (Québec) G0R 2C0 CANADA
Téléphone : 1 800 463-7043 · (418) 247-3947
Télécopieur : 1 800 662-7801 · (418) 247-7801
www.ouellet.com · info@ouellet.com

User's guide

OTH3000-A (3000 W @ 240 VAC)

OTH4000-A (4000 W @ 240 VAC)

OTH5007 (5000 W @ 347 VAC)

Non-programmable thermostat




Warnings

The installation of this thermostat should be made by a certified electrician and must be installed in conformity with the national and local Electrical Codes.



Since you are a valuable customer, before starting the installation of your new thermostat, please make sure that the breakers for your heating system are off at the main electrical panel!


The thermostat must be installed in series with your heating device. Connecting the thermostat directly to the line voltage source will damage the unit.

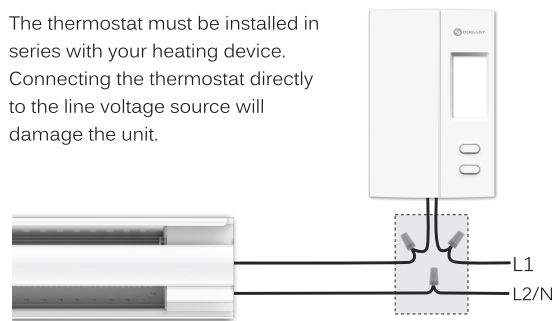


Note: The wires of this thermostat are non-polarized.

For optimum performance, a recommended clearance of 12 in. (305 mm) above and below the thermostat and 3 in. (76 mm) on each side of the thermostat.

Your thermostat OTH3000-A / OTH4000-A / OTH5007

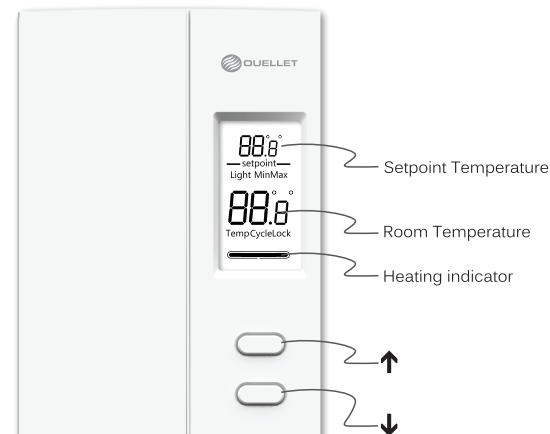

Install your thermostat

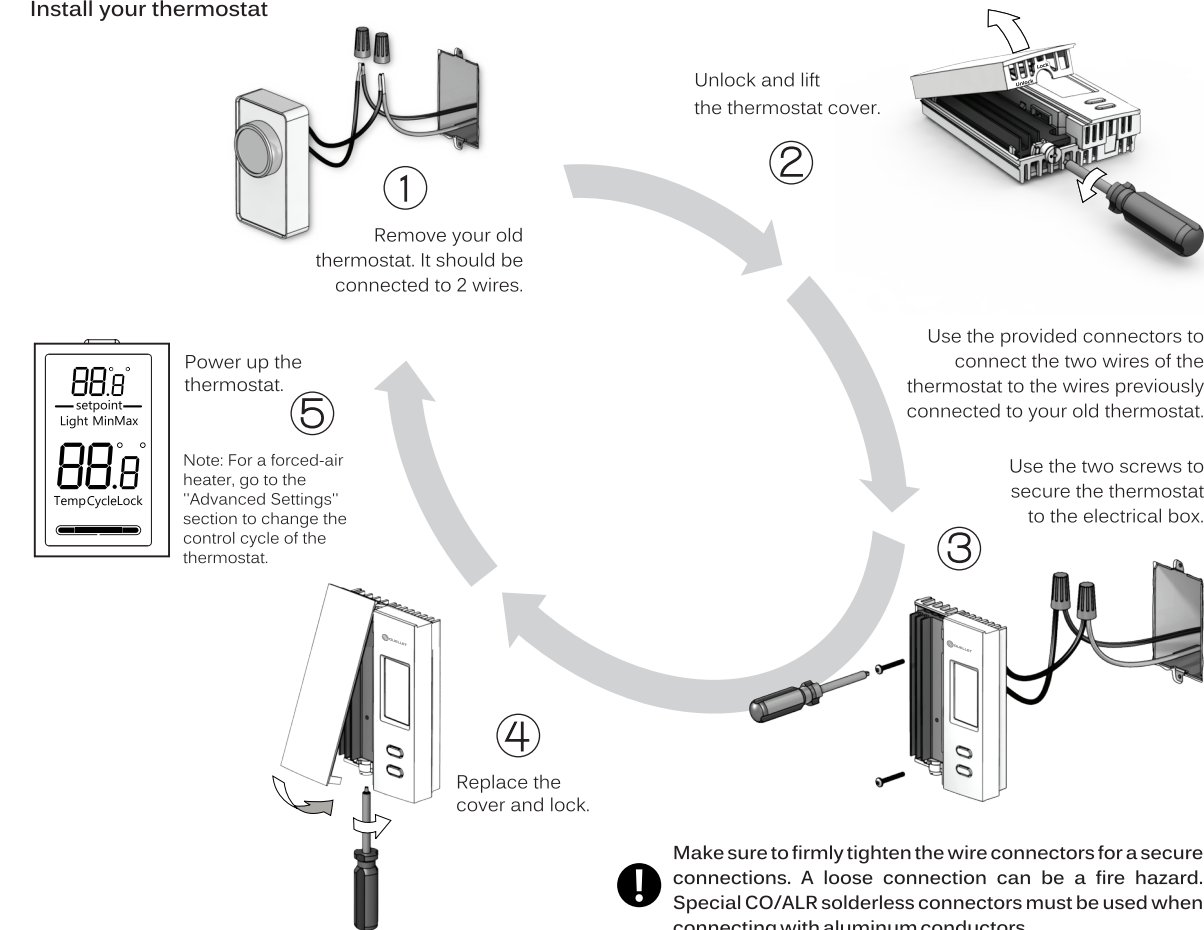

Advanced Settings

Get the setpoint to its minimum and hold the  button for 3 seconds to access the menu.



Press the  or  button to change the setting.

Press the  and  button to select the next parameter.

Press and hold the  and  button for 3 seconds to exit the menu and return to normal display.

Order	Parameters & settings	Display
1	Temperature format °C or °F (default: °C)	 Temp
2	Backlight OFF (active for 6 seconds if a button is pressed) / ON (always active) (default: OFF)	 Light
3	Minimum setpoint 5 °C - 30 °C (41 °F - 86 °F) (default: 5 °C)	 Min
4	Maximum setpoint 5 °C - 30 °C (41 °F - 86 °F) (default: 30 °C)	 Max
5	Cycle length SHT (short cycle for electric baseboard) / FAN (long cycle for forced-air heater) (default: SHT)	 Cycle
6	Keypad lock OFF / ON (default: OFF)	 Lock

Technical specifications

Setpoint range: 5 °C to 30 °C (41 °F to 86 °F)
Display range: 0 °C to 70 °C (32 °F to 99 °F)
Resolution: ± 0.5 °C (± 1 °F)
Storage: -20 °C to 50 °C (-4 °F to 122 °F)

Thermostat OTH3000-A

Maximum load: 12.5 A / 1500 W @ 120 VAC, 50/60 Hz
12.5 A / 2600 W @ 208 VAC, 50/60 Hz
12.5 A / 3000 W @ 240 VAC, 50/60 Hz

Minimum load: 1.25 A / 150 W @ 120 VAC, 50/60 Hz
1.25 A / 260 W @ 208 VAC, 50/60 Hz
1.25 A / 300 W @ 240 VAC, 50/60 Hz

Thermostat OTH4000-A

Maximum load: 16.7 A / 2000 W @ 120 VAC, 50/60 Hz
16.7 A / 3465 W @ 208 VAC, 50/60 Hz
16.7 A / 4000 W @ 240 VAC, 50/60 Hz

Minimum load: 1.25 A / 150 W @ 120 VAC, 50/60 Hz
1.25 A / 260 W @ 208 VAC, 50/60 Hz
1.25 A / 300 W @ 240 VAC, 50/60 Hz

Thermostat OTH5007

Maximum load: 14.4 A / 4000 W @ 277 VAC, 50/60 Hz
14.4 A / 5000 W @ 347 VAC, 50/60 Hz

Minimum load: 1.25 A / 346 W @ 277 VAC, 50/60 Hz
1.25 A / 434 W @ 347 VAC, 50/60 Hz

Compatible with an electric heating system such as:

- Baseboard heater
- Convector (short cycle)
- Forced-air heater (long cycle)

3-year limited warranty

OUELLET CANADA INC. warrants the components of the OTH3000-A, OTH4000-A & OTH5007 against defects in material and workmanship for a 3 year period from the date of purchase, under normal use and service, when proof of purchase of such is provided to the manufacturer. This warranty does not cover any transportation costs that may be incurred by the consumer. The obligation of Ouellet Canada Inc., under the terms of this warranty, will be to supply a new unit and this releases the manufacturer from paying the installation costs or other secondary charges linked to replacing the unit or the components.



If you have any questions on these products,
call our technical support team at:

180, 3e Avenue, L'Islet (Quebec) G0R 2C0 CANADA
Phone : 1 800 463-7043 · (418) 247-3947
Fax : 1 800 662-7801 · (418) 247-7801
www.ouellet.com · info@ouellet.com