



USER MANUAL

Step-by-step guide to accessing all the functions
of the Finder Bliss2 smart thermostat
Type 1C.B1.9.005.0007

BLISS2

CONTENTS

| | |
|---------------------------------------|---------|
| EASY INSTALLATION | page 1 |
| OVERVIEW OF SCREENS & ICONS | page 3 |
| MANUAL MODE | page 4 |
| ON/OFF MODE | page 5 |
| AUTOMATIC MODE | page 6 |
| HUMIDITY | page 7 |
| GATEWAY ASSOCIATION | page 8 |
| TRANSMISSION TEST WITH THE GATEWAY | page 9 |
| HEATING/COOLING | page 10 |
| GATEWAY SET-UP | page 12 |

TECHNICAL SPECIFICATION

Power supply: 3x1.5 V alkaline batteries type AAA - LR03
Temperature adjustment: (+5...+37)°C
Resolution: 0.1°C
Degree of protection: IP20
Output: 5 A 250 V AC changeover volt-free contact
Mounting: Wall

INSTALLATION NOTES

SAFETY REQUIREMENTS

The installation and assembly of electrical equipment must be performed by experienced personnel. Before connecting the thermostat, make sure that the load (pump, valve, boiler, etc.) is not powered and that it falls within the thermostat's contact rating.

POSITIONING


Install the thermostat away from heat sources (radiators, direct sunlight, kitchens), away from doors/windows, and mount approximately 1.5 meters above floor level.

FIXING BASE TO WALL

First, detach thermostat from its base by inserting two fingers into the central rear hole and, with the other hand, pull the front of the thermostat towards you.


FIXING BASE

Secure the Smart Bliss2 thermostat base to the wall using the screws included in the package. When fixing, be careful not to over-tighten the screws to avoid damaging the base.

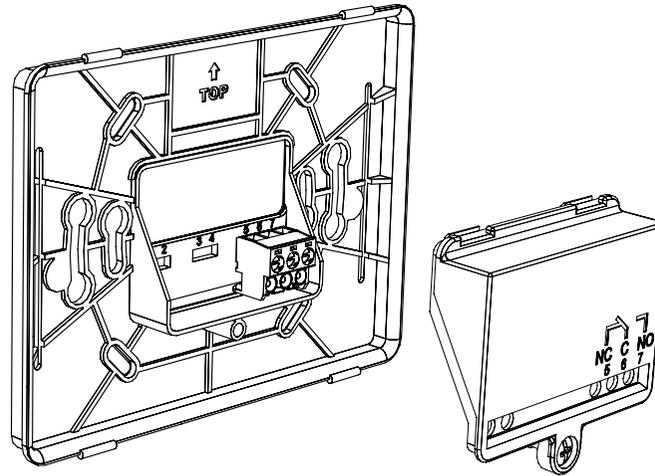

ELECTRICAL CONNECTIONS

To make the connections, first refer to instructions for your heating system (pump, valve, boiler, etc.), then remove the terminal cover and connect the appropriate wires to terminals 6 (COM) and 7 (NO) of the Smart Bliss2 thermostat.

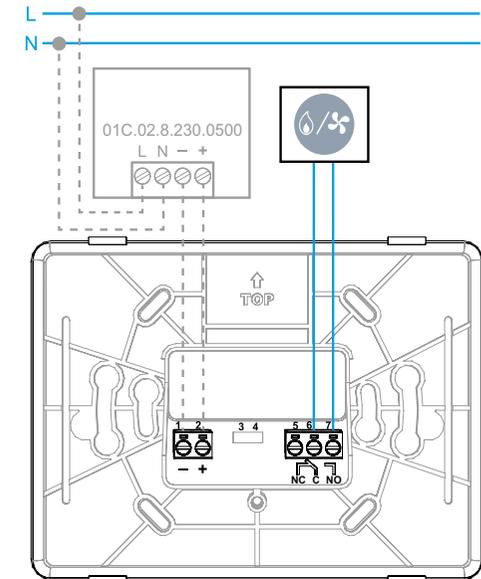


Type 01C.02.8.230.0500: OPTIONAL power supply

Using the external power supply, the batteries **MUST** be removed.

BATTERY INSERTION AND MOUNTING

THE THERMOSTAT


- Insert 3 x 1.5V alkaline batteries type AAA - LR03, paying attention to the indicated polarity.
After inserting the batteries, initialization screens will appear. Wait for this process to finish and the detected temperature will then appear.
- Mount the thermostat to its base by first engaging the bottom part of the thermostat with the lower pins of the base plate, then close the upper part of the thermostat to lock onto the upper pins.

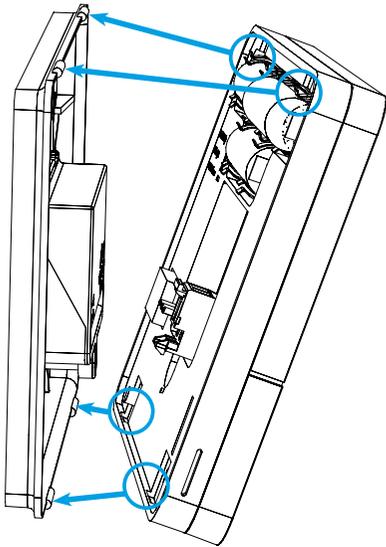

The thermostat is now ready to be configured.
However, the Gateway2 (1Y.GU.005.1) must first be installed.

GATEWAY2 INSTALLATION


Connect the Micro USB connector to the Gateway2 (1Y.GU.005.1) and plug the power supply into the electrical outlet.

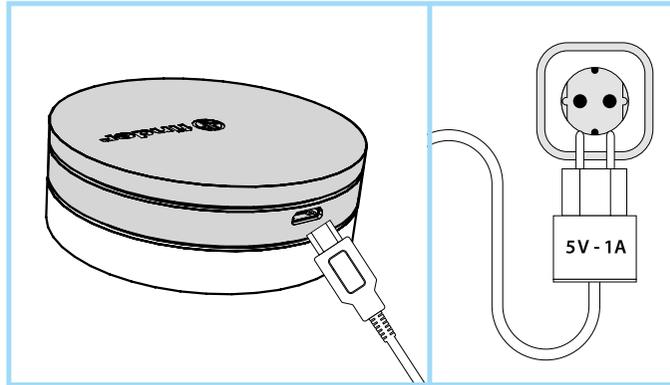

After switching on, the luminous base of the Gateway2 flashes with a fading white light - which indicates it is awaiting configuration.

CONFIGURATION

To configure the Gateway2 and the Smart Bliss2 Thermostat, download the Finder Bliss application from the Google Play Store or the Apple Store and proceed with the configuration following the tutorial on the App. When requested by the App, activate the association of the thermostat following the following screens:

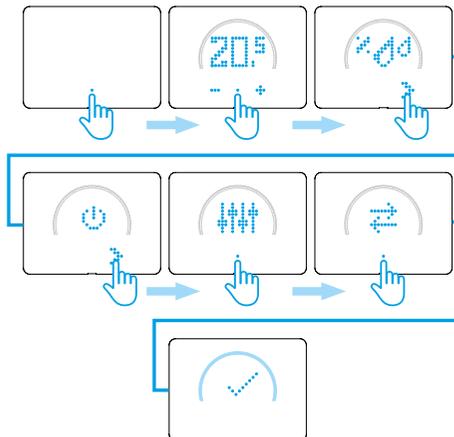

When done, the temperature detected by the Smart Bliss2 thermostat will be displayed in the application.

THE LUMINOUS BASE - NOTES

WHITE LED

- **Fading flashing:** waiting for configuration
- **Fixed:** Wi-Fi network and Cloud connection present
- **2 Flashes:** Connected to the Wi-Fi network but no connection to the Cloud (Check your Internet connection)
- **3 Flashes:** No connection to the Wi-Fi network and no connection to the Cloud (Check your Wi-Fi network)

BLUE LED


- **Flashing:** sending Bluetooth commands

RED LED

- **Flashing:** sending commands to the Smart Bliss2 Thermostat

To change the light intensity of the GATEWAY2 base, press the button **3**:

- 1 Once: Low brightness
- 2 times: Medium-Low brightness
- 3 times: Medium-High brightness
- 4 times: High brightness

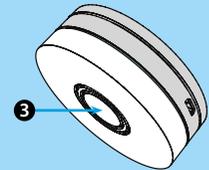

RESET

Press the button for > 10 seconds to restore factory settings



Finder YOU






ROOM TEMPERATURE
Thermostat is set to AUTOMATIC mode (AUTO) and will respond to programming via the App. Current room temperature is displayed.



HUMIDITY DETECTED IN THE ATMOSPHERE
In this section you can opt to view the level of humidity in the atmosphere (% RH).

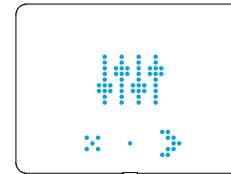


SETTINGS MENU
From here you can access the device settings.



TARGET TEMPERATURE IN MANUAL MODE
The thermostat is set to MANUAL mode. The target temperature is displayed.



%RH
Display of Relative Humidity currently present in the atmosphere.

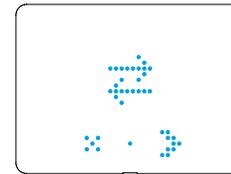

ASSOCIATION WITH THE GATEWAY
The opposing arrows will flash only during the gateway pairing procedure.



MANUAL MODE
Thermostat is set to Manual mode. If the small arc segment at the top is coloured, the heating or cooling system is active. If red - heating If blue - cooling.




ON/OFF SECTION
In this section you can turn the thermostat ON or OFF.



TRANSMISSION TEST WITH THE GATEWAY
At this point in the menu you can perform a signal transmission test between the gateway and the thermostat.



HOURS SETTING
This displays the number of hours for which the manual mode is to apply. From 1 hour (h01) to permanent (h∞).

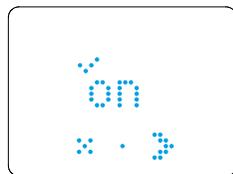

ON MODE
With ON mode selected, the thermostat can function in either AUTO or Manual modes.



RESULT OF THE TRANSMISSION TEST WITH THE GATEWAY
0 SIGNAL ABSENT: the gateway is unreachable
1/6 POOR: bring the two devices closer
7/8 GOOD: make changes only if errors are found
9/10 VERY GOOD: stable connection.




FULL ARC
Appears when a setting is accepted and when the heating or cooling system is active.




OFF MODE
With the OFF mode selected, the thermostat will still maintain a frost protection setting of + 5°C to avoid freeze damage to the system.




FIRMWARE VERSION
At this point in the menu it is possible to view the firmware version present on the device.

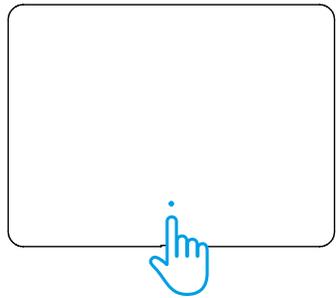


With the display off, press the point to turn the display on.

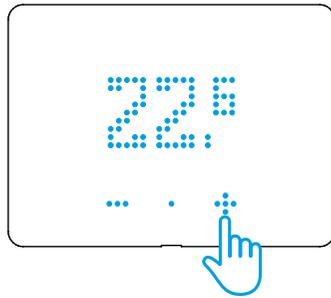



To change the target temperature, press + or - on the main screen.

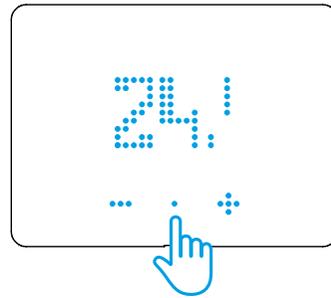


With the target temperature showing, confirm by pressing the point.

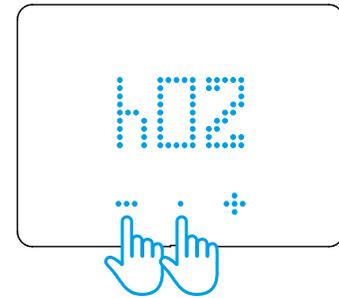


To set the number of hours for which the manual mode is to apply (after which it will return to the AUTO (weekly) mode). Press the + to increase the hours h01 = 1 hour, h02 = 2 hours, ... Pressing the - until «h∞» is displayed will set the permanent manual mode (until this is canceled via the App or thermostat.) Confirm by pressing the center point.

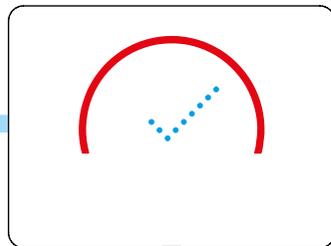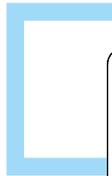


The arc will turn red if it is set on heating or blue if it is on cooling.

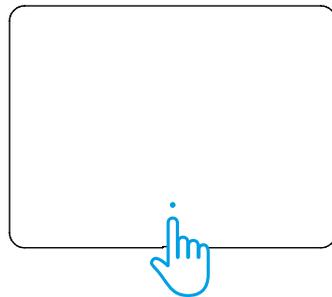


With the display off, press the point to turn the display on.

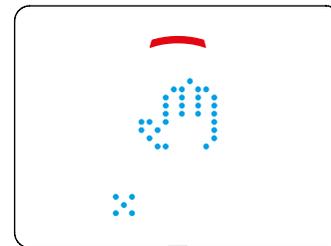


The small top segment of the arc will show either red or blue, indicating respectively that the heating or cooling system is active. Press X to cancel Manual operation and to return to AUTO operation.

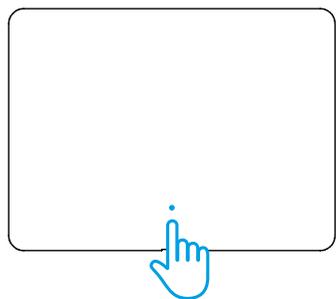


With the display off, press the point to turn the display on.

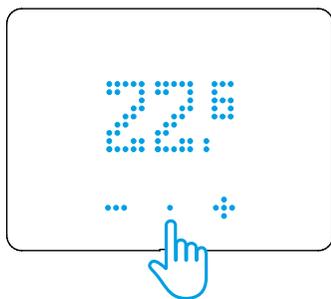


Press the point to access the internal menu.

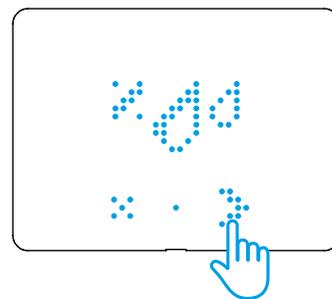


The "humidity" section will be displayed as it is the first item in the menu. Press on the right arrow to move on from the RH section.

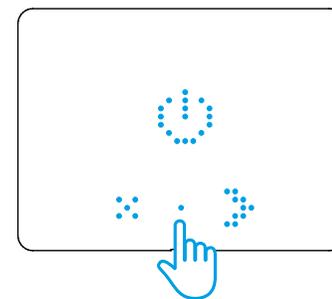


Press on the point to confirm if you wish to enter the ON/OFF section.

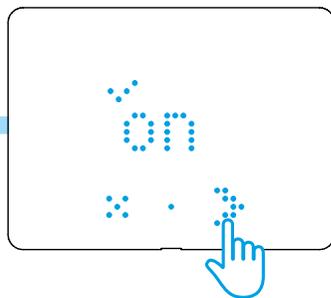


This screen indicates with the "√" that the thermostat is currently ON. Press the right arrow if you wish to change this.

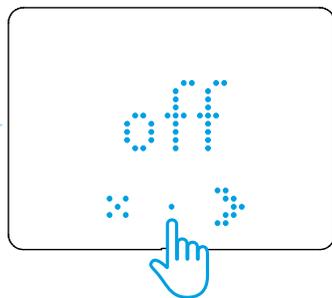


Press on the point to confirm you wish to select the OFF state.

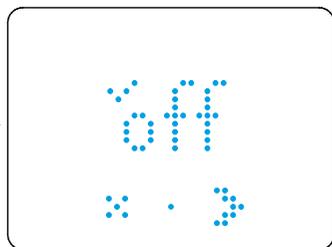


OFF mode is confirmed as being correctly set. Exit the menu by pressing X, or wait for the display to time out.

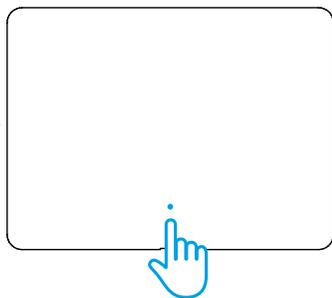


With the display off, press the point to turn the display on.

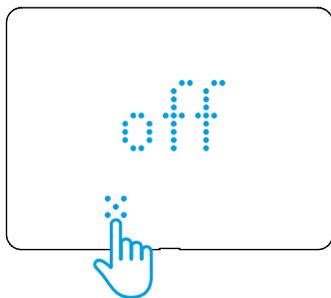

Press X to exit the ON/OFF mode.

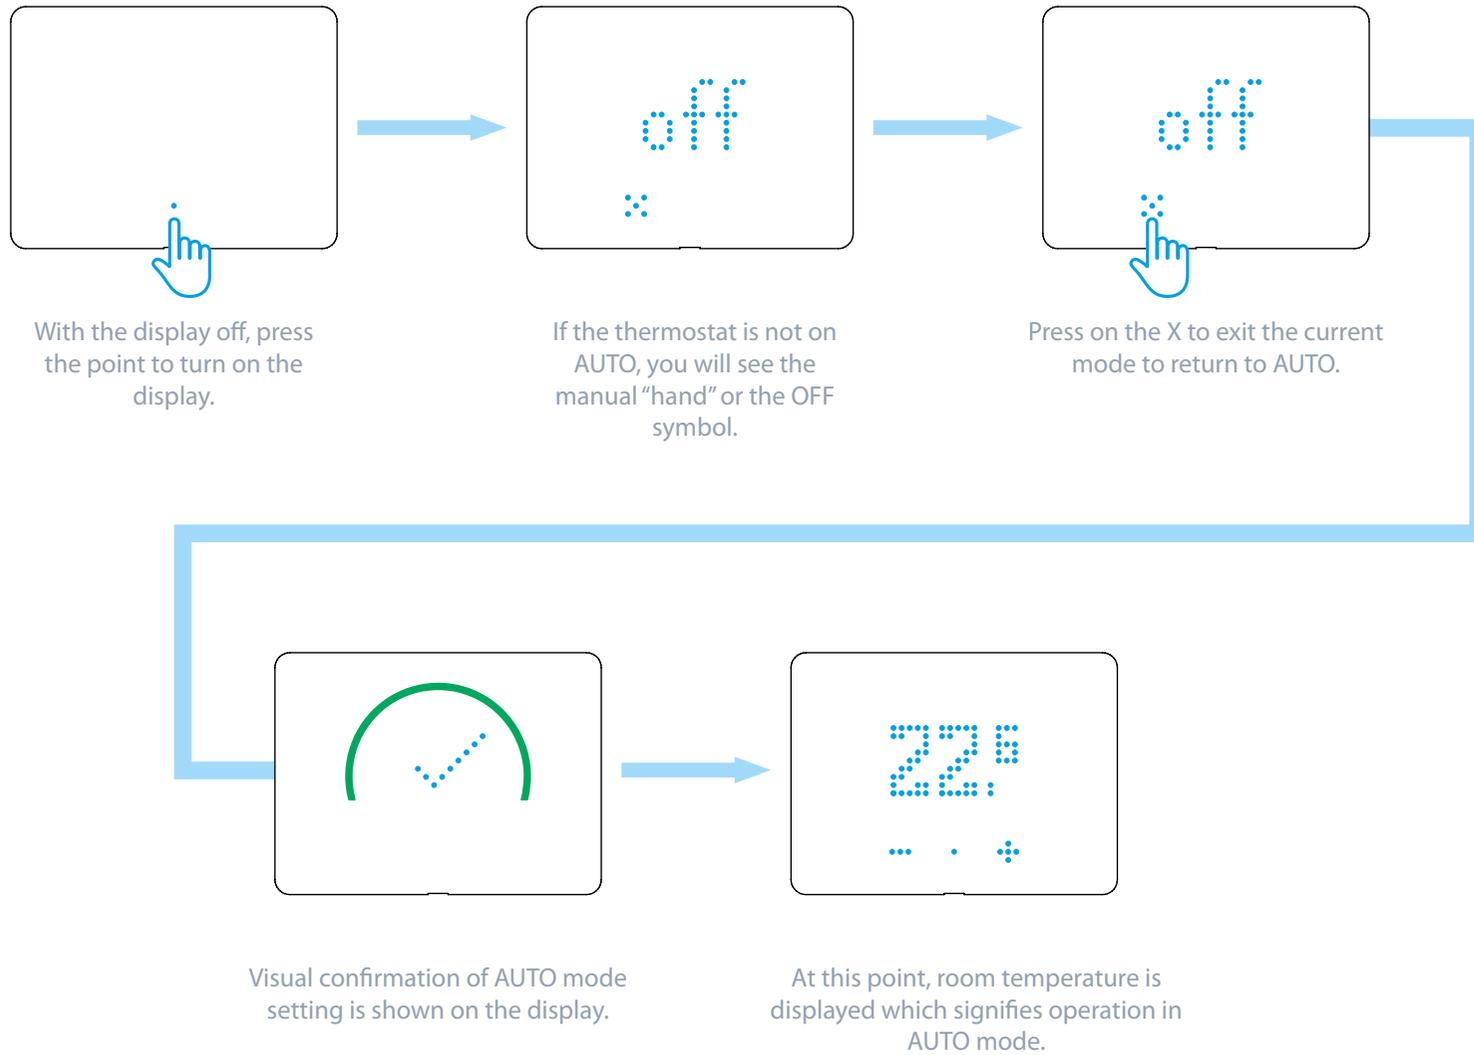

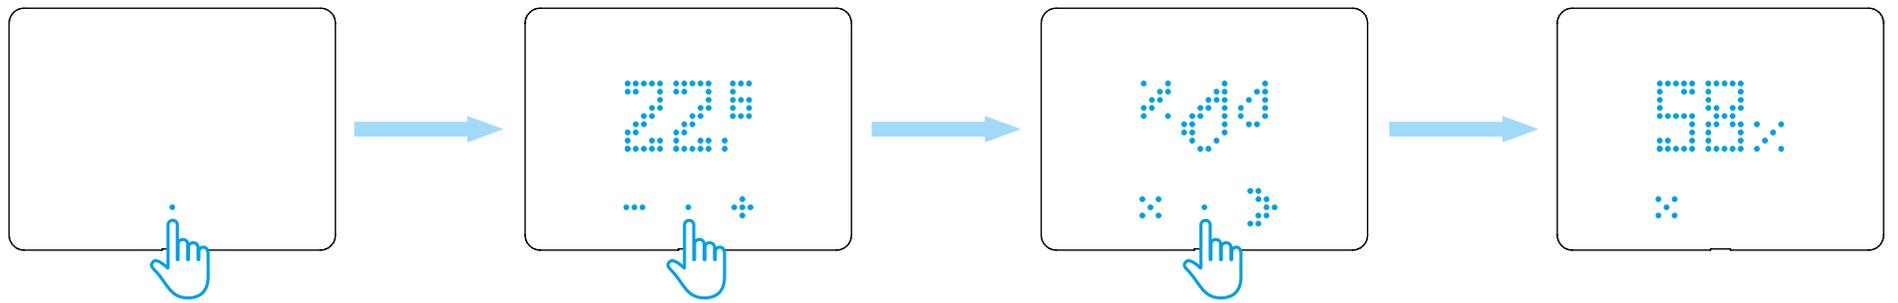

With the display off, press the point to turn the display on.


Press the point to access the internal menu.

The "humidity" section will be displayed as it is the first item in the menu. Press on the point to enter this section.


This screen shows the humidity (% RH). Press on the X to go back.

ASSOCIATION WITH THE GATEWAY


BEFORE FOLLOWING THE ASSOCIATION PROCEDURE, OPEN THE BLISS APP AND ADD A NEW DEVICE

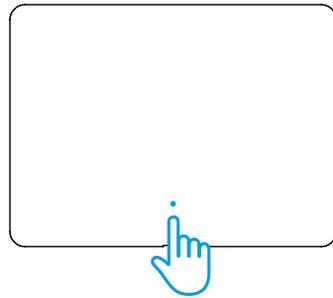


With the display off, press the point to turn the display on.

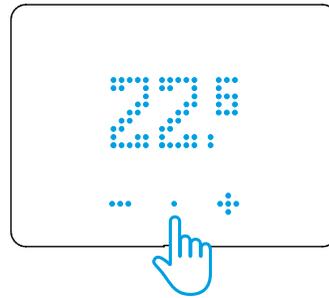


Press the point to access the internal menu.

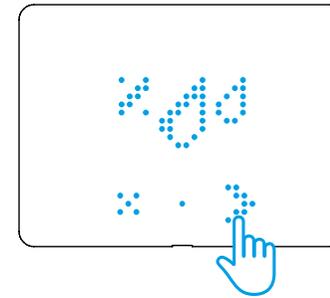


The "humidity" section will be displayed as it is the first item in the menu. Press on the right arrow to move on from the RH section.

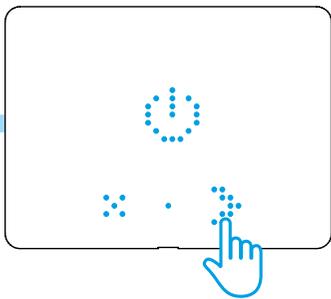


Press the right arrow to keep scrolling through the menu.

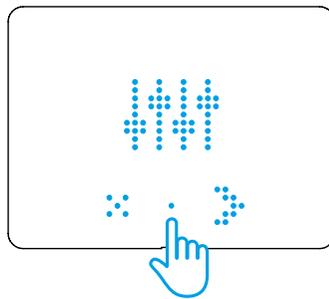


Press on the point to access the device settings.

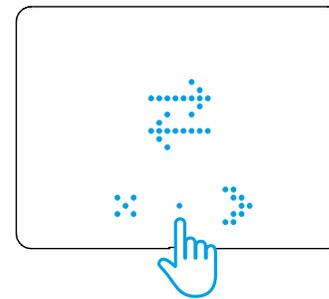

Press the point to put the thermostat into pairing mode. The opposing arrows will begin to flash.

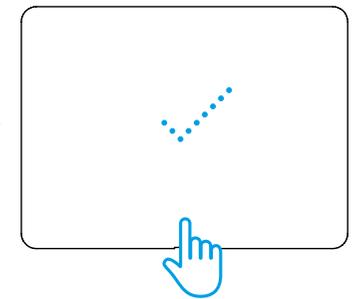


Visual confirmation of the correct association is shown on the display.

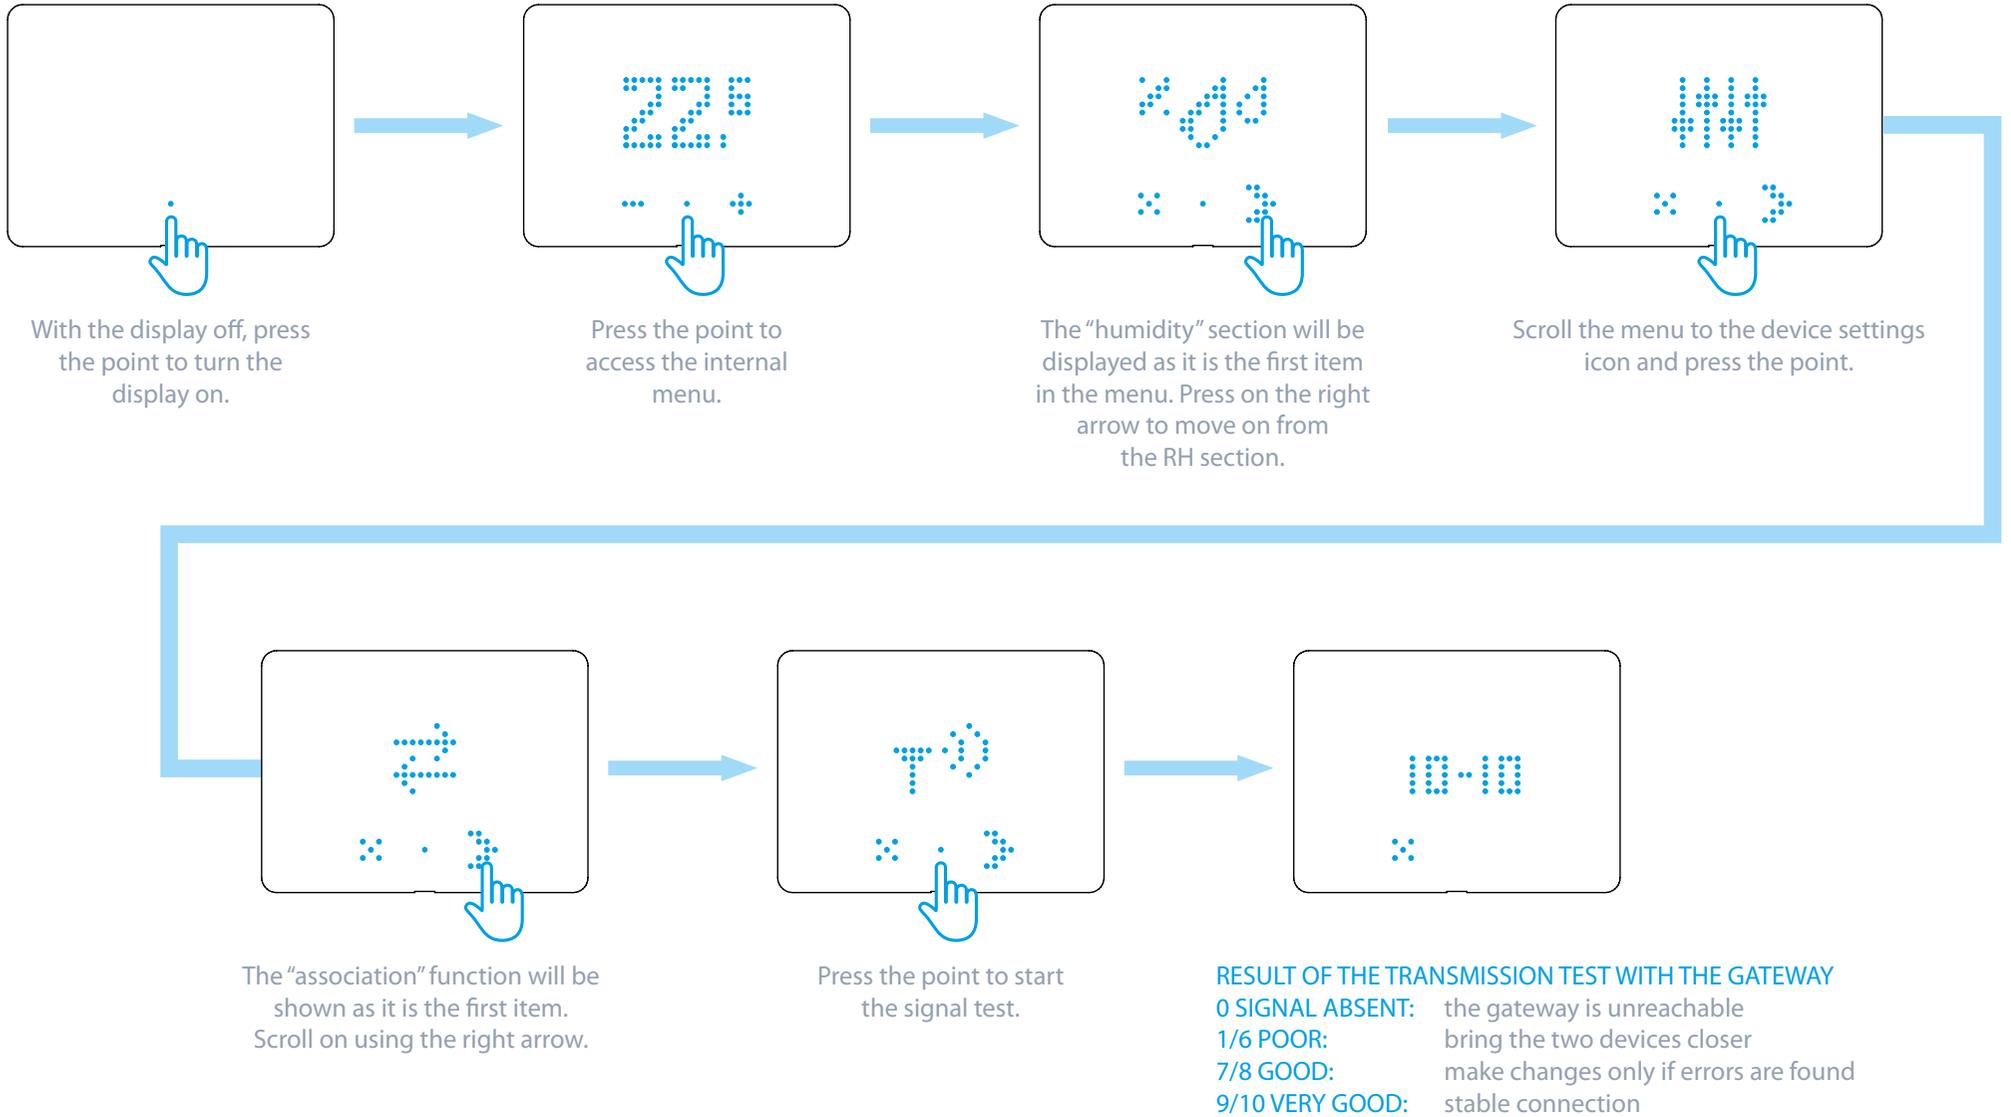


HEATING/COOLING

ACCORDING TO THE OPERATING MODE OF THE THERMOSTAT, YOU WILL SEE DIFFERING VISUAL FEEDBACKS ON THE LUMINOUS ARC

HEATING THE ARC IS RED

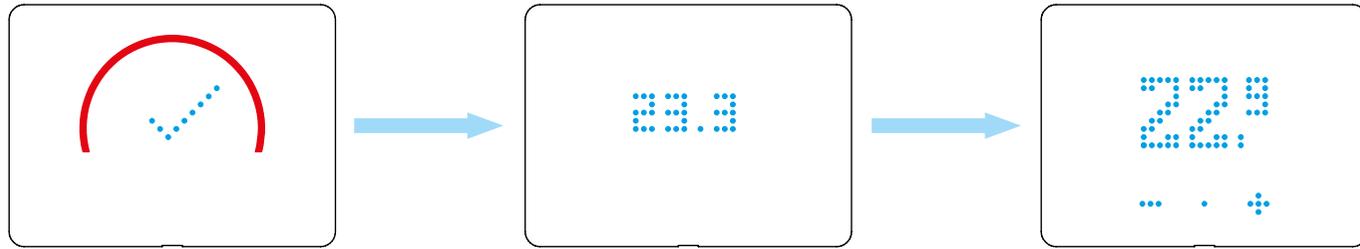

COOLING THE ARC IS BLUE

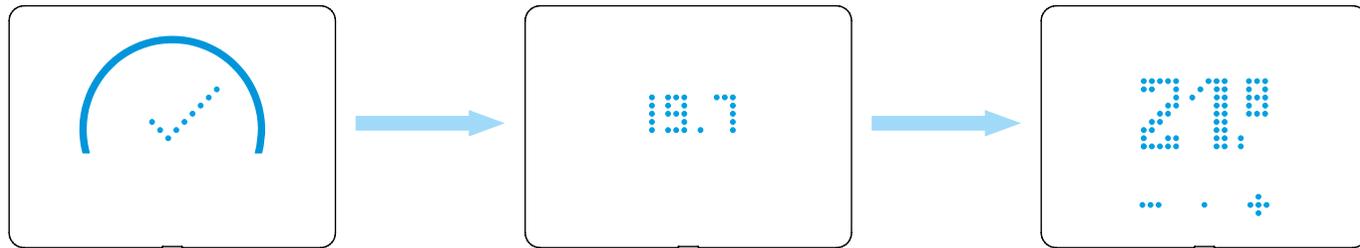



INSTALLATION GUIDE

2nd GENERATION GATEWAY & BLISS2

2nd generation gateway Type 1Y.GU.005.1 & Smart Thermostat Bliss2
Type 1C.B1.005.0007 configuration steps

FIRST STEPS


Connect the gateway to the socket using the micro USB power supply before starting the procedure.

IMPORTANT


The BLISS2 smart thermostat is only compatible with the second generation gateway Type 1Y.GU.005.1.

The code is shown under the black silicone cover at the top of the gateway.

The gateway works only with 2.4GHz Wi-Fi networks. Check that you have a 2.4GHz network configured on your home router and that you have the network name and password before starting the procedure.

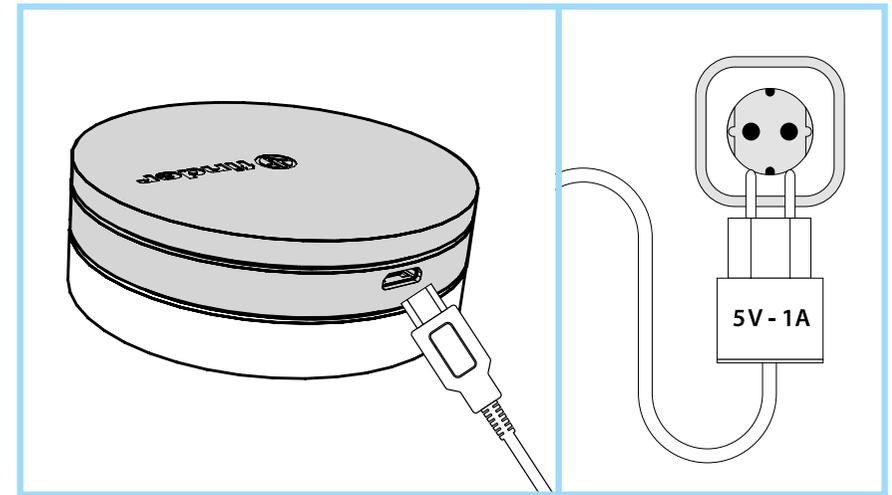


01

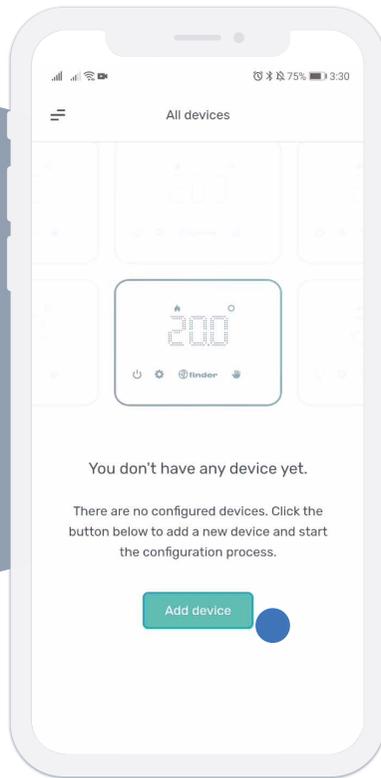


After logging in to the new Bliss app, click on "Add device" to start the association

Select "Bliss2" to star the association of the gateway and the thermostat.

02

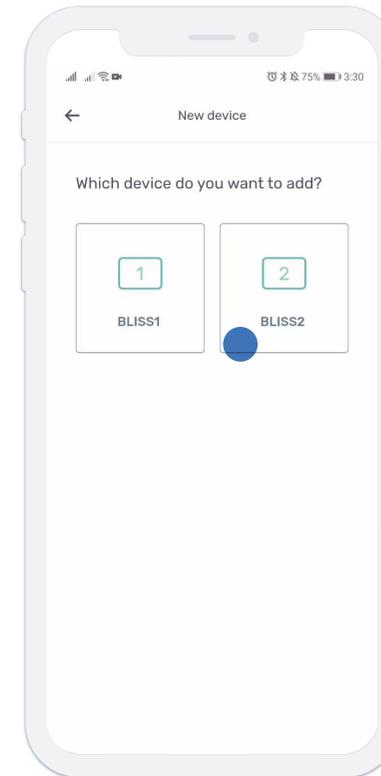


03

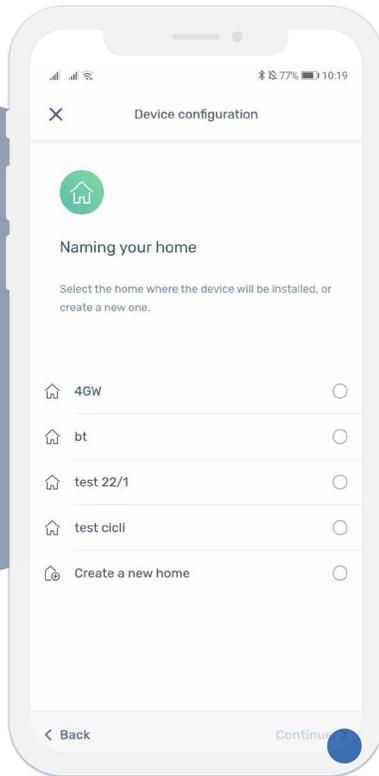


Select an existing house (created with Yesly) or create a new one to define which system the gateway belongs to. Then press "Continue".

Select the time zone you are in.
The default is for Italy

04

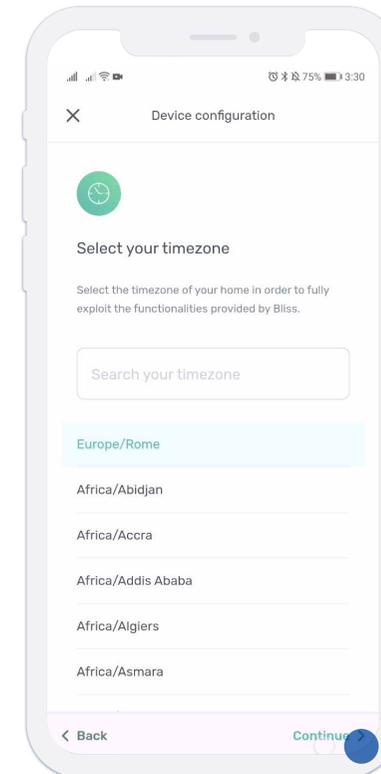


05

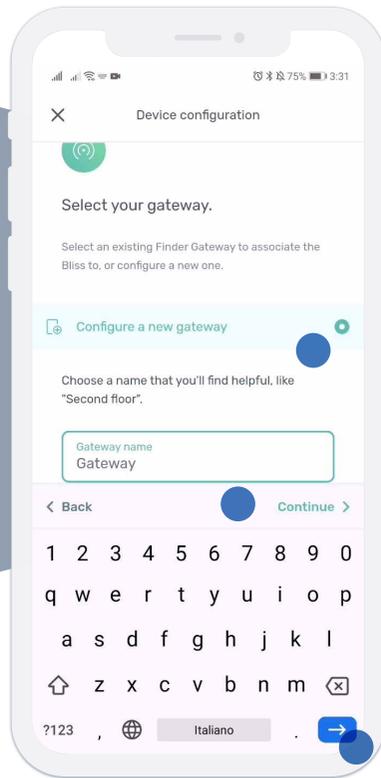


Select "Configure a new gateway" and give it a name. Then press "Continue".

After selecting the gateway to associate, choose to connect it to the Wi-Fi network. Then press "Continue".

06

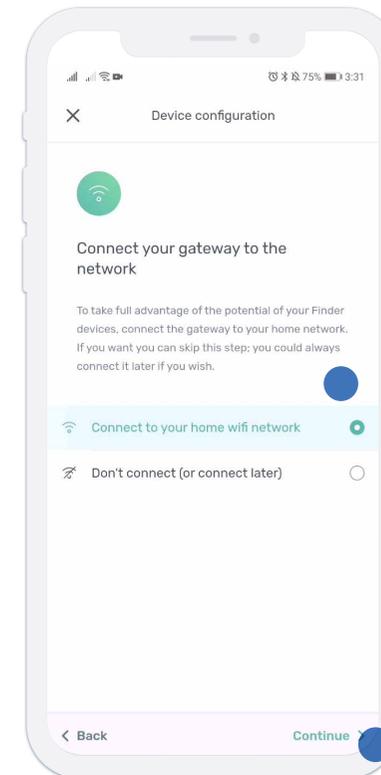


07

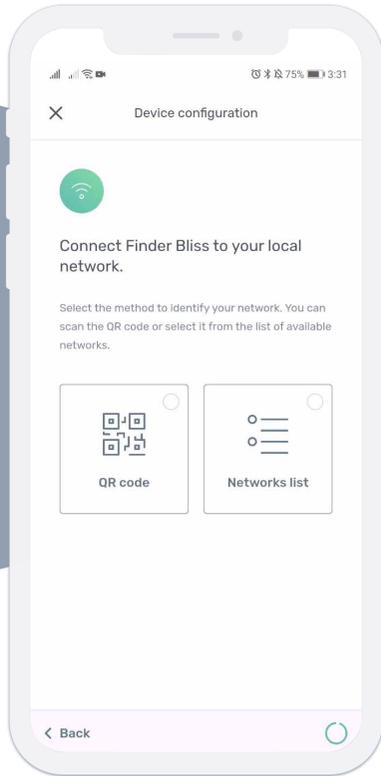


You can choose whether to associate the gateway to the network by selecting it from those available or by scanning the QR code located behind the router.

After choosing the network to associate with, the gateway will complete the association.

08

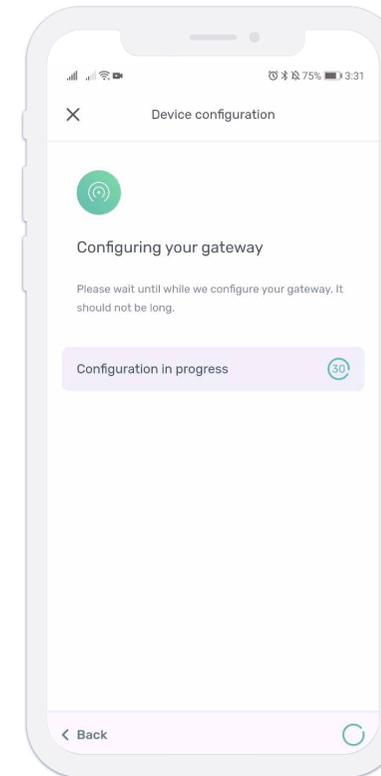


09

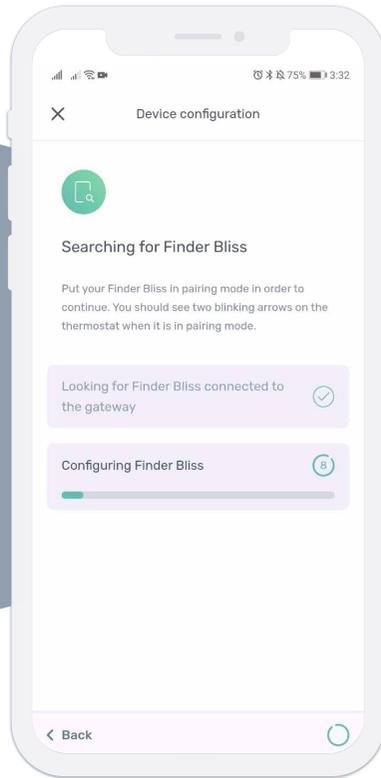


Now you need to put the Bliss2 thermostat in "connection" mode. Go to the device and make the arrows blink.

Execute this procedure on the Bliss2:

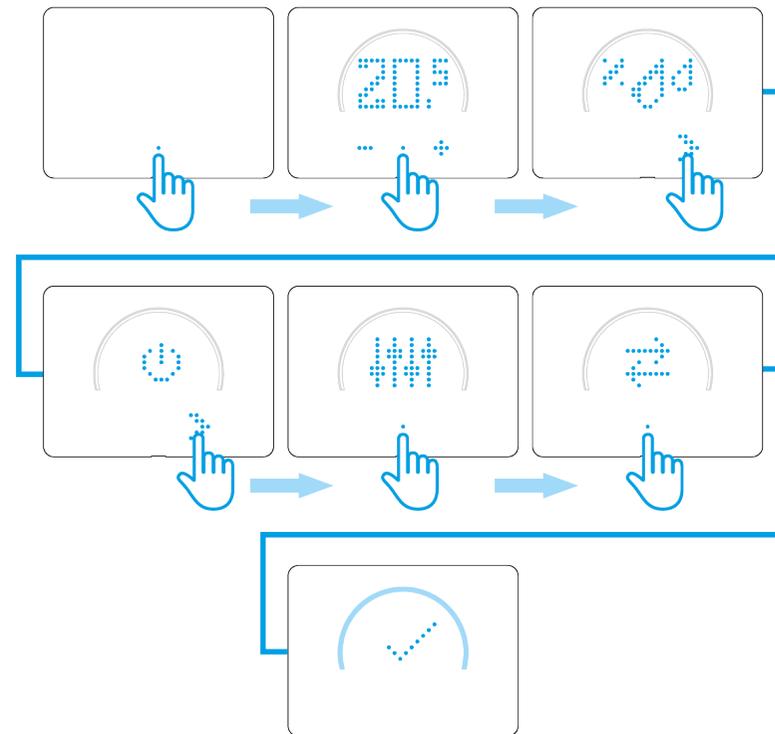


10

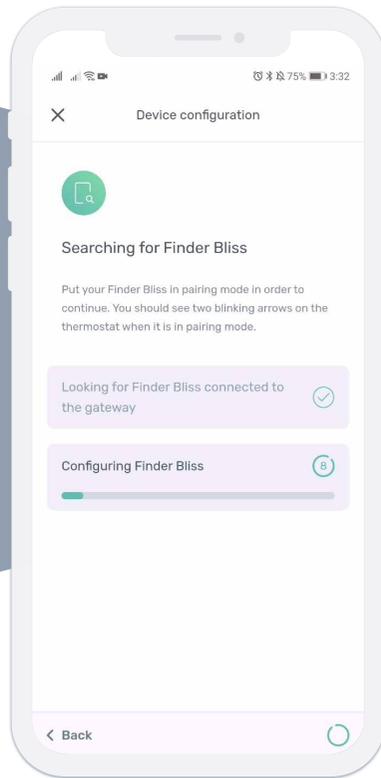

The gateway is now communicating with the Bliss2.
Please, wait.

When the procedure is over,
give the Bliss2 a name.

11

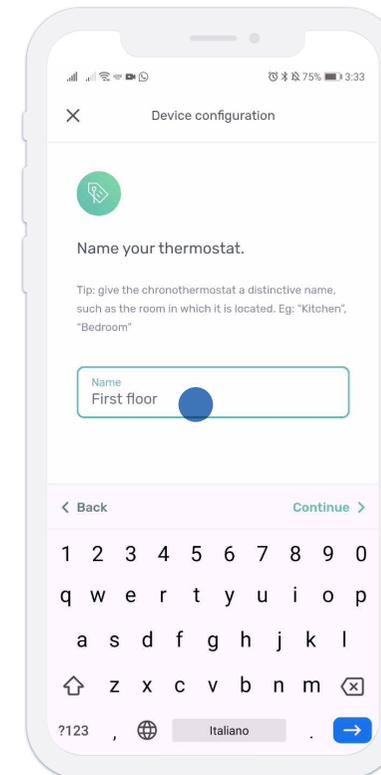

12



Finder Bliss2 is properly paired. Now all you have to do is configure the temperature schedule and discover the rest of the functions of your new Smart Bliss2 Thermostat.

 **FINDER SpA**
Via Drubiaglio 14
I-10040 ALMESE (TO)
Tel. +39 011 9346 211
Fax +39 011 9359 079
export@findernet.com

 **FINDER FRANCE Sarl**
Avenue d'Italie
ZI du Pré de la Garde
F - 73300 ST. JEAN DE MAURIENNE
Tel.+33/479/83 27 27
Fax +33/479/59 80 04
finder.fr@findernet.fr

 **FINDER GmbH**
Hans-Böckler-Straße 44
D - 65468 Trebur-Astheim
Tel. +49 6147 2033-0
Fax +49 6147 2033-377
info@finder.de

 **S.R.L FINDER BELGIUM - B.V.**
Bloemendaal, 5
B - 1547 BEVER
Tel. +32/54/30 08 68
finder.be@findernet.com

 **FINDER P.L.C.**
Opal Way - Stone Business Park
STONE, STAFFORDSHIRE
ST15 0SS - UK
Tel: +44 (0)1785 818100
Fax: +44 (0)1785 815500
finder.uk@findernet.com

 **FINDER RELAIS NEDERLAND B.V.**
Dukdalfweg 51
1041 BC AMSTERDAM - NEDERLAND
Tel. +31/20/615 65 57
Fax +31/20/617 89 92
finder.nl@findernet.com

 **FINDER RELAIS VERTRIEBS GmbH**
IZ NÖ-Süd, Str. 2a, Obj. M 40
A - 2351 Wiener Neudorf
Tel. +43/2236/86 41 36 - 0
Fax +43/2236/86 41 36 - 36
finder.at@findernet.com

 **FINDER CZ, s.r.o.**
Radiová 1567/2b
CZ - 102 00 PRAHA 10
Tel. +420 286 889 504
Fax +420 286 889 505
finder.cz@findernet.com

 **FINDER AB**
Sånklegsgatan 6c
SE - 215 79 Malmö
Tel: +46 (0) 40 93 77 77
Fax:+46 (0) 40 93 78 78
finder.se@findernet.com

 **FINDER ApS**
Bøstrupvej 11
DK-8870 Langå
Tel. +45 69 15 02 10
Fax +45 69 15 02 11
finder.dk@findernet.com

 **FINDER ELECTRICA S.L.U.**
C/ Severo Ochoa, 6
Pol. Ind. Cap de L'Horta
E - 46185 La Pobla de Vallbona (VALENCIA)
Apdo Postal 234
Telf. Oficina Comercial 93 836 51 30
finder.es@findernet.com

 **FINDER - Hungary Kereskedelmi Kft.**
Kiss Ernő u. 3/A.
HU - 1046 BUDAPEST
Tel. +36/1-369-30-54
Fax +36/1-369-34-54
finder.hu@findernet.com

 **FINDER PORTUGAL LDA**
Travessa Campo da Telheira, n. 56
Vila Nova da Telha,
P - 4470-828 - MAIA
Tel. +351 22 99 42 900 -1-6-7-8
Fax +351 22 99 42 902
finder.pt@findernet.com

 **FINDER (Schweiz) AG**
Industriestrasse 1a
CH - 8157 DIELSDORF (ZH)
Tel. +41 44 885 30 10
Fax +41 44 885 30 20
finder.ch@finder-relais.ch

 **FINDER RELAYS, INC.**
4191 Capital View Drive
Suwanee, GA 30024 - U.S.A.
Tel. +1/770/271-4431
finder.us@findernet.com

 **FINDER ECHIPAMENTE srl**
Str. Clujului nr. 75 F,
401180 Turda
Jud. CLUJ - ROMANIA
Tel. +40 264 403 888
Fax +40 264 403 889
finder.ro@finder.ro

 **RELEVADORES FINDER, S.A. de C.V**
Carretera a San Bernardino Chalchihuapan #43
San Pablo Ahuatempan, Santa Isabel Cholula, Puebla.
C.P. 74350 - MÉXICO.
Tel. +52/222/2832392, 2832394
Fax. +52/222/7628471
finder.mx@findernet.com

 **FINDER OOO**
Bakuninskaya street, 78/1
105082 MOSCOW
RUSSIAN FEDERATION
Tel. +7/495/229-49-29
Fax +7/495/229-49-42
finder.ru@findernet.com

 **FINDER COMPONENTES LTDA.**
Rua Olavo Bilac, 326
Bairro Santo Antônio
São Caetano Do Sul - São Paulo
CEP 09530 - 260 - BRASIL
Tel. +55 11 4223 1550
Tel. +55 11 2147 1550
Fax +55 11 4223 1590
finder.br@findernet.com

 **FINDER ARGENTINA S.R.L**
Calle Martín Lezica 3079
San Isidro - Buenos Aires
CP B1642GJA - ARGENTINA
Tel +54 11 4763.8627
Fax +54 11 7535.5444
finder.ar@findernet.com

 **FINDER ASIA Ltd.**
Room 901 - 903, 9F, Premier
Center20 Cheung Shun Street
Cheung Sha Wan, Kowloon
Hong Kong
Tel. +852 3188 0212
Fax +852 3188 0263
finder.hk@findernet.com

 **FINDER Polska Sp. z o.o.**
ul. Logistyczna 27
62-080 Sady
Tel. +48 61 865 94 07
Fax +48 61 865 94 26
finder.pl@findernet.com

 **FINDER INDIA PVT. LTD.**
Unit No.912 - R.G. Trade Tower,
Netaji Subhash Place,
Wazirpur District Centre,
Pitampura - Delhi - 110034 - INDIA
Tel. +91-11-47564343
Fax +91-11-47564344
finder.in@findernet.com

 **FINDER BALTIC, UAB**
Eiguliu str. 9-1
Vilnius, LT-03150
Lithuania
Tel. +370 526 53 027
finder.lt@findernet.com

 **FINDER LATAM S.A.**
Logistic Center for South America
Ruta 8 km 17.500 - Edificio Quantum - O
CP: 91600 - Zonamerica - Montevideo -
finder.latam@findernet.com

 **FINDER COMPONENTS INC.**
5028 South Service Road
Burlington, ONTARIO L7L 5Y7
Toll Free 1 800 265 6263
Local 905 681 7767
finder.ca@findernet.com

 **FINDER d.o.o.**
Peske 17
1236 Trzin, Slovenija
Tel. +386 (0)1 561 5981
sales.si@findernet.com