

 
HT300S USER MANUAL

GENERAL SPECIFICATIONS

HT300S is a wired room thermostat. The user can adjust the room temperature with the required temperature and get more comfortable and economic heating/cooling.

- Daily and Weekly Programming
- Different Mode Options (Comfort, Economy)
- Heating Calibration
- Heating/Cooling Option
- Precise Temperature Measurement
- ON/OFF Control
- TPI Algorithm
- Wired Connection


HT300S AND EQUIPMENTS

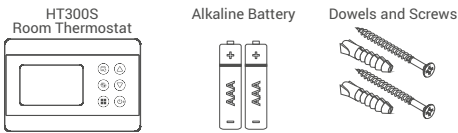

TECHNICAL DATA


Dimensions	85mm / 125mm / 20mm
Operating Current	3V DC (2 x AAA alkaline battery)
Relay NO Switching Current	2A/30VDC (Resistive load) 0.5A/125VAC (Resistive load)
Temperature Measurement Accuracy	0.1°C
Operating Temperature Range	(5°C) – (30°C)
Battery Life	1 Year (2 x AAA)
Operating Temperature	(-10°C) – (+50°C)
Storage Temperature	(-20°C) – (+60°C)

 ROOM THERMOSTAT Buttons Functions

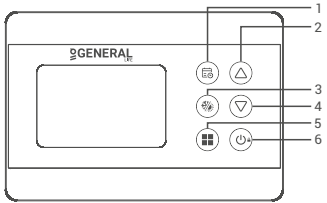



1	Weekly Program Button
2	Temperature Adjustment Button (To Increase)
3	Heating & Cooling Option
4	Temperature Adjustment Button (To Decrease)
5	Mode Button
6	On/Off Button – Unlock Button

 Screen Indicators

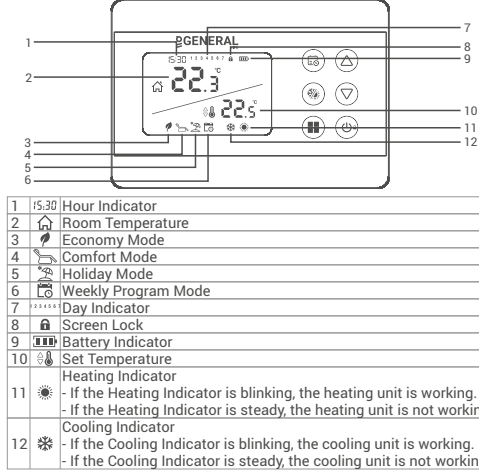


ROOM THERMOSTAT PLACEMENT

  Room Thermostat needs to be placed in the room which is used most frequently. For instance; living room or lounge. Placing the Room Thermostat in a spot that have air circulation like entrance of a room or side of window should be avoided. Also anywhere close to heating/cooling units such as radiator, stove and spots which get direct sun lights would not be suitable. Room Thermostat needs to be located above the floor 150 cm height. Few trials may be made to find the most convenient spot.

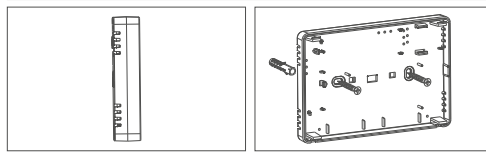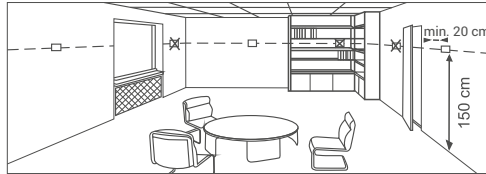

BATTERY PLACEMENT

 Before starting, power off the device connected to the Room Thermostat and make sure that the energy is cut off.

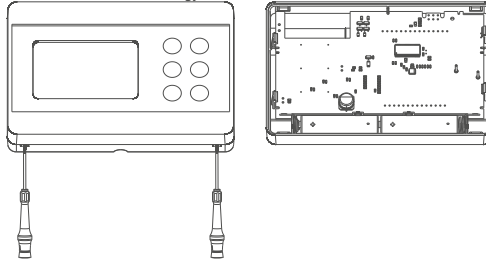


As shown in the picture above, press the screwdriver forward from the space shown, bend the tabs and separate the front cover. Insert 2 new AAA alkaline batteries in the battery housing with the correct battery direction. Replace both batteries at the same time. Then align the front part of your Room Thermostat to the back and squeeze it towards the back.

Low Battery Warning: When the “Lb” icon appears on the screen, it means “low battery warning”. It is recommended to replace the batteries when this warning appears.

Warning: When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that may occur would be out of warranty.

Please throw your dead batteries into the waste bin for batteries.

 ROOM THERMOSTAT WIRING DIAGRAM

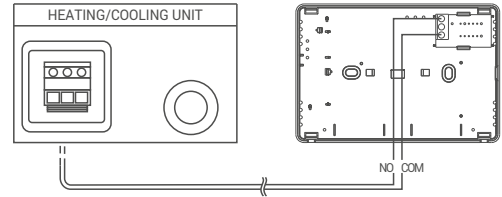

Warning!

Operations within the heating / cooling unit or the electrical installation must be carried out by professionally qualified persons.

ROOM THERMOSTAT TEMPERATURE CALIBRATION

Temperature sensors which are used in Room Thermostats are highly sensitive. You may need to calibrate your Room Thermostat if you would like to get the same temperature values with other thermometers in your living space.

- While your device is turned off, press and hold the “On/Off” button for 3 seconds.
- Press the “On/Off” button until the “CL” menu appears. In order to see the desired temperature, set the temperature difference by pressing the “Temperature Adjustment Buttons”. This value can be arranged between “-8°C” and “+8°C”.
- In order to save the settings and exit, press the “On/Off” button until the device turns off.

Note: Recommended temperature calibration is “0.0°C”.

FACTORY SETTINGS RESET

You can reset your Room Thermostat to its default factory settings. This operation resets the mode temperature values, calibration setting and heating/cooling modes to factory setting. In order to reset your Room Thermostat to factory setting:

- While your device is turned off, press and hold the “On/Off” button for 3 seconds.
- Press the “On/Off” button until the “f5” menu appears.
- While in the “f5” menu, select the “Y” option by using the “Up” or “Down” buttons and press the “On/Off” button.
- Your device will be turned off and reset to factory settings.

KEY LOCK

 
In the Room Thermostat there is a key lock function to avoid any unintended contact.

In order to unlock the Room Thermostat’s key lock the “On/Off” button should be pressed for 3 seconds. If buttons on Room Thermostat are not touched for 10 seconds, key lock will be reactivated.

DAY AND HOUR SETTINGS

- While your Room Thermostat is on, keep pressing the “Weekly Program” button for 3 seconds.
- At the first screen that appears, hour part will be blinking. You may set the time with the “Up” and “Down” buttons.
- After setting the time, the “Heating & Cooling Option” button needs to be pressed once. For minute setting, minute part will be blinking. You may set the minute with the “Up” and “Down” buttons.
- After setting the minute, the “Heating & Cooling Option” button needs to be pressed once to set the day of the week.
- Monday has set as the first day of the week and indicated with number “1”.
- Numbers indicate the following days respectively 2-Tuesday, 3-Wednesday, 4-Thursday, 5-Friday, 6-Saturday and 7-Sunday
- When setting is done, you may exit by pressing the “Weekly Program” button for 3 seconds.

MODE SETTING

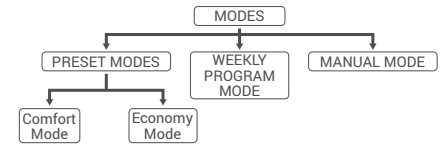

Your Room Thermostat has 4 different modes. 3 of them (Comfort and Economy Mode) are preset modes. Other modes are manual mode and weekly program mode.

In preset modes, temperature values are based on user’s choices which have been set in the beginning. Manual mode allows the Room Thermostat to operate within the temperature which is required and set directly by user. Weekly Program mode continues to work according to the weekly schedule determined by the user.

In order to change the temperature values of preset modes:

- Press and hold the “Mode” button for 3 seconds while your Room Thermostat is on.
- Comfort Mode temperature value will appear. You may adjust the temperature value of Comfort Mode by pressing the “Up” and “Down” buttons.
- When setting is done, you may adjust the temperature value of Economy Mode with the “Up” and “Down” buttons by pressing the “Mode” button again.
- You may exit the setting screen by pressing the “Mode” button 3 seconds.
- In order to change the manual mode temperature, press the “Up” or “Down” button while in the main screen. The Room Thermostat will switch to Manual Mode once pressed the “Up” or “Down” button.
- You may press the “Mode” button to switch to the other modes.

WEEKLY PROGRAM

You may set the operating schedule of your Room Thermostat with weekly program mode. 7 different temperature values can be set for each day in weekly programming. These values can be set in temperature adjustment screens “P0-P6”.

- In order to set the weekly schedule, press and hold the “Weekly Program” button for 3 seconds while your Room Thermostat is on. The “Hour, Minute and Day” setting will appear. Press the “Heating & Cooling Option” button until the “Weekly Program” menu (P0) appears.
- Days of the week will be blinking on the screen. You can initiate the weekly program setting if you wish to set the same schedule for every day of the week.
- Press the “Up” button once if you wish to set the same schedule for the weekdays. First five days of week will be blinking on the screen.
- Press the “Up” button once more if you wish to set the same schedule only for the weekend. Last two days of the week will be blinking on the screen.
- Press the “Up” button one more time if you wish to set the same schedule for every day of the week. 1st day of the week will be blinking on the screen. You can switch between the days by pressing the “Up” button. Press the “Down” button in order to switch to the previous day.
- Press the “Weekly Program” button once to set a schedule.
- “P0” will be blinking on the screen. Set the temperature value of “P0” by pressing the “Weekly Program” button once more. The hour setting of “P0” cannot be changed since it’s factory setting.
- Press the “Weekly Program” button again. Day indicator will be blinking. If you will not change the day, press the “Weekly Program” button again and switch to the “P1” setting by pressing the “Up” button.
- First, hour setting will appear on the screen. Once you complete the hour setting, adjust the minute setting by pressing the “Weekly Program” button. After the minute setting, press the “Weekly Program” button to set the temperature value.
- Follow the same steps for other schedule settings.
- Once all changes made, press and hold the “Weekly Program” button for 3 seconds to save.

Note: In order to check the weekly schedule which has been set without making any changes, press the “Weekly Program” button once while your Room Thermostat is on. Press the “Up” and “Down” buttons to see the days, press the “Mode” button to see the settings between “P0-P6”.

Your Room Thermostat works with the TPI algorithm. Room Thermostats using TPI technology predict when the temperature of your home will rise above or below the set temperature and turn the heating / cooling unit on and off accordingly. This ensures that your home stays at the temperature you set without maximum deviations up and down.

-
- TEMPERATURE (°C) -- -- Desired Temperature — TPI Room Thermostat
- 30
- 23
- 5
- Time

ISIPARK
ISIPARK İÇ VE DİŞ TİC. A.Ş.
 Fatih Mah. 1188 Sokak No:11 Samsir/İZMİR
 Tel: (0232) 457 99 00 Fax: (0232) 457 91 22
 Mersin No: 4610621370000016
 Gazimeci V.D. 466 073 1206

- 1-The warranty period starts from the invoice date and warranted against manufacturing defects for 5 years.
- 2-Devices and apparatus are delivered to the customer in working condition in our company. On-site commissioning is subject to a service fee.
- 3-The repair of the devices and apparatus covered by the warranty is carried out in our company factory and should send by contracted transportation company. In on-site services, the transportation and accommodation expenses of the service personnel belong to the customer. The shift fee during transportation is added to the service fee and collected in advance.
- 4-The maintenance of devices and apparatus is done in our company. For the maintenance of the devices and apparatus, the round travel fares belong to the customer.
- 5-In case of malfunctioning of the devices and apparatus whose warranty period continues, it is tested in our company whether the malfunction is caused by a customer or manufacturer fault, and it is reported with a report issued by our company.
- 6-In case of detection of manufacturer-induced errors of devices and apparatus whose warranty period continues, the customer can request a replacement or repair of the devices and apparatus at full expense by the manufacturer, unless it's higher than the product's price.
- 7-In the event that the faults of the devices and apparatus whose warranty period continues are determined as caused by the customer, all expenses would belong to the customer.
- 8-Customers should be aware of damages (if there is any) of product and warn manufacturer since the day warranty duration starts. If customer do not warn manufacturer with knowledge of damage, customer lose the rights of article 6.
- 9-Malfuctions resulting from the use of devices and apparatus contrary to the matters stated in the User Manual are not covered by the warranty.
- 10-Devices and their apparatus are out of warranty if they are beaten, broken or scratched by the customer.
- 11-Damages resulting from the use of devices and apparatus belonging to other brands and models without the approval of the manufacturer are not covered by the warranty.
- 12-Battery leakage and errors due to rust, oxidation and liquid contact by working in acidic / humid environments are not covered by the warranty.
- 13-When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfuctions that will occur are out of warranty.
- 14-Damages that may occur during the transportation of devices and apparatus are not covered by the warranty. Customers can take transportation insurance.
- 15-Damages caused by mains voltage / faulty electrical installation are not covered by the warranty.
- 16-Devices and apparatuses are out of warranty for malfuctions caused by force majeure such as fire, flood, and earthquake etc.
- 17-All of the devices and apparatuses, including all their parts, are under the warranty of our company.
- 18-In case of malfunction of the devices and apparatuses within the warranty period, the time spent during repair period is added to the warranty period. The repair period of the product cannot exceed 20 working days. This period starts from the date of notification to the service station of the malfunction related to the product or, in the absence of a service station, to the seller, dealer, agency, representative, importer or manufacturer of the product. Consumer can report the problem by: phone, fax, e-mail, registered and reply paid letter or a similar way. However, in case of a conflict, responsibility of prove is belong to the customer. If the malfunction of the product is not repaired within 20 working days, the manufacturer-producer or importer, has to allocate another product with similar features to the use of the consumer until the repair of the product is completed.
- 19-Although the consumer uses his/her repair rights, -If the product breaks down for 4 times in a year or 6 times in warranty duration and these problems effects main purpose of the product. (Starting from delivery time during warranty.) -Exceeding the maximum time required for repair, -In the event that the service station is not available, if it is determined that the repair of the defect is not possible with the report prepared (in order) by one of the seller, dealer, agency, representative, importer or manufacturer, a refund or a price discount at the rate of defect can be requested.
- 20-The customer can make complaints and appeals to consumer courts or consumer arbitration committees.
- 21-The warranty document must be kept by the customer during the warranty period. If the document is lost, a second document will not be issued. In case of loss, repair and replacement of devices and apparatus will be made for a fee.

Type: Digital Room Thermostat
Brand: GENERAL Life
Model: HT300S
Guarantee Period: 5 Years
Max. Time to Repair: 20 Days
Banderole and Serial Number:

Vendor
Title:

Address:

Tel: **Fax:**
E-Mail:
Invoice Date and Number:
Delivery Time and Place:
Authorised Signatory:
Company Stamp:

Product
Type: Digital Room Thermostat
Brand: GENERAL Life
Model: HT300S

İspark reserves the rights of changing product specifications and user manuals.
*For all changes, you may visit generallife.com.tr