

## HT 300 SET

### LCD Wireless Room Thermostat Controls

HT 300 SET is wireless room thermostat. The user can adjust the room thermostat in line with the requirement and get more comfortable and economic heating.

Touch Keys, LCD Backlight Screen  
 Daily and Weekly Program (7x24)  
 Operating Moods: Comfort Mode, Economy Mode, Holiday Mode  
 Weekly Program and Manual use  
 Only heating or only cooling setting  
 ON/OFF Control  
 Battery DC 3 V (2 × 1,5V AAA Alkaline pil)

### Use

HT 300 SET room thermostats are used for keeping the required room temperature in only heating or only cooling systems.

#### Place of use

Houses

Apartments

Trading Areas

Light Industrial Buildings

Zone Valves, Thermal Valves

Gas or Petrol Burners

Fans

Pumps

HT 300 SET room thermostat has only heating and cooling outs. Its stabilizer gets room temperature with integrated sensor and keeps the required temperature by providing control commands . Switching difference is 0.5 °C.

## Operating

Key features of HT 300 SET room thermostat:

- Two-position control
- LCD Backlight screen
- NTC 10K sensor

## Mechanical Design


The device consists of 2 parts:

With its digital display having electronic, drive elements and built room temperature sensor,

A plastic body

A mounting base

Plastic body is mounted on mounting base.

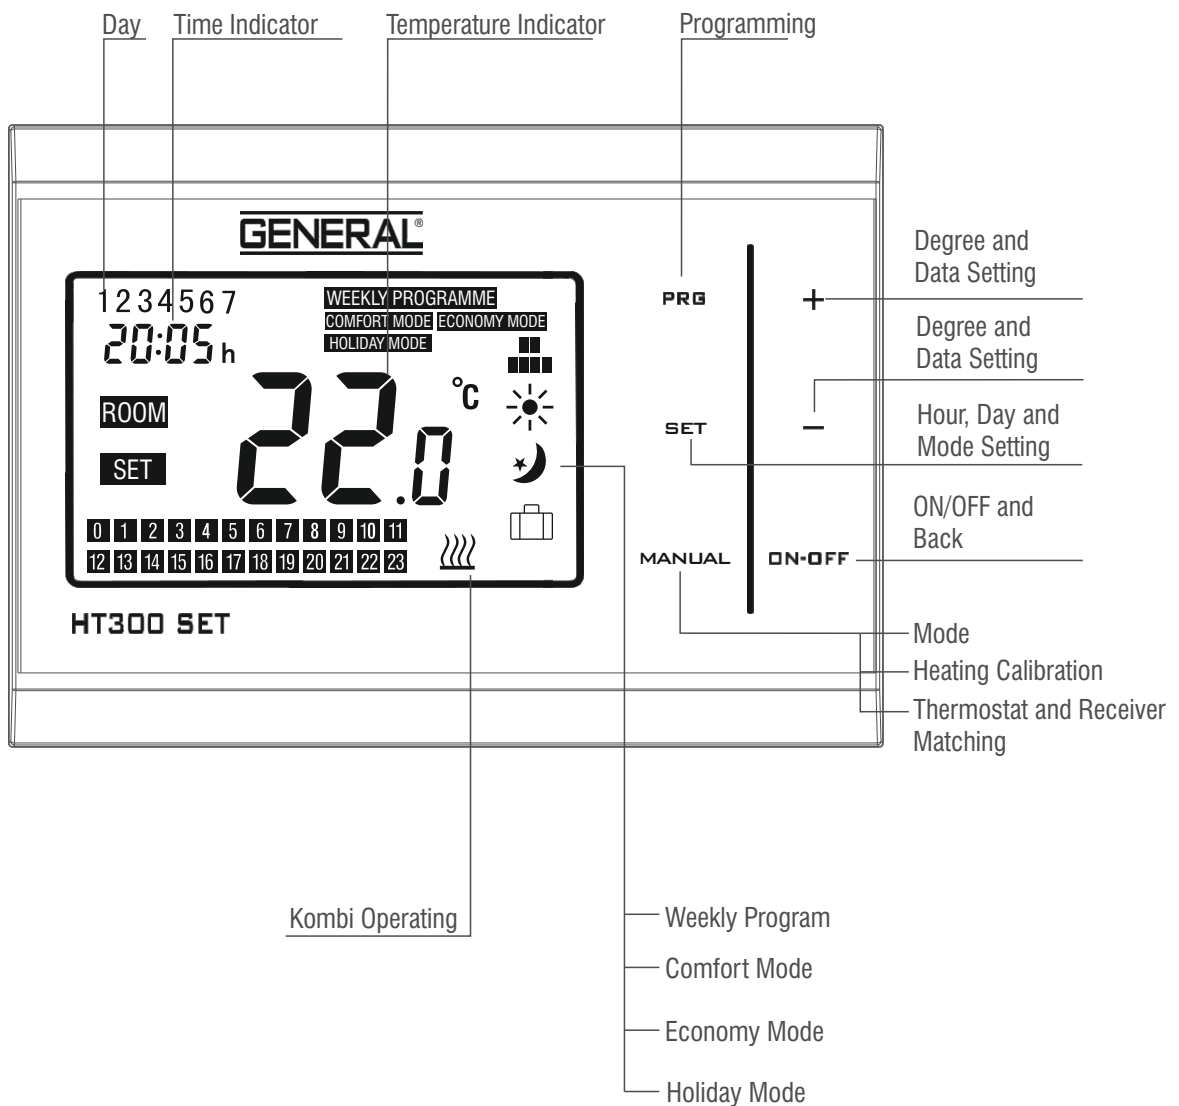

## Battery Change


Insert 2 alkaline batteries in the battery compartment in the way as seen below. You can change the battery by removing the cover of battery compartment. Change 2 batteries always at the same time. Pay attention to the directins while inserting the batteries.

## Warning

Throw your dead batteries into waste basket for batteries. While changing, programmed informations might be deleted from the memory of remote control device. Please look at the program chapter of the instruction book.

## Mounting

In order to remove the wall hanger, loosen the screws at the bottom as can be seen in the figure. Fix the removed wall hanger 150 cm above the ground on a central place of the house. Avoid mounting HT 300 SET on the places where air circulation is too much such as door entrance or window ledge.

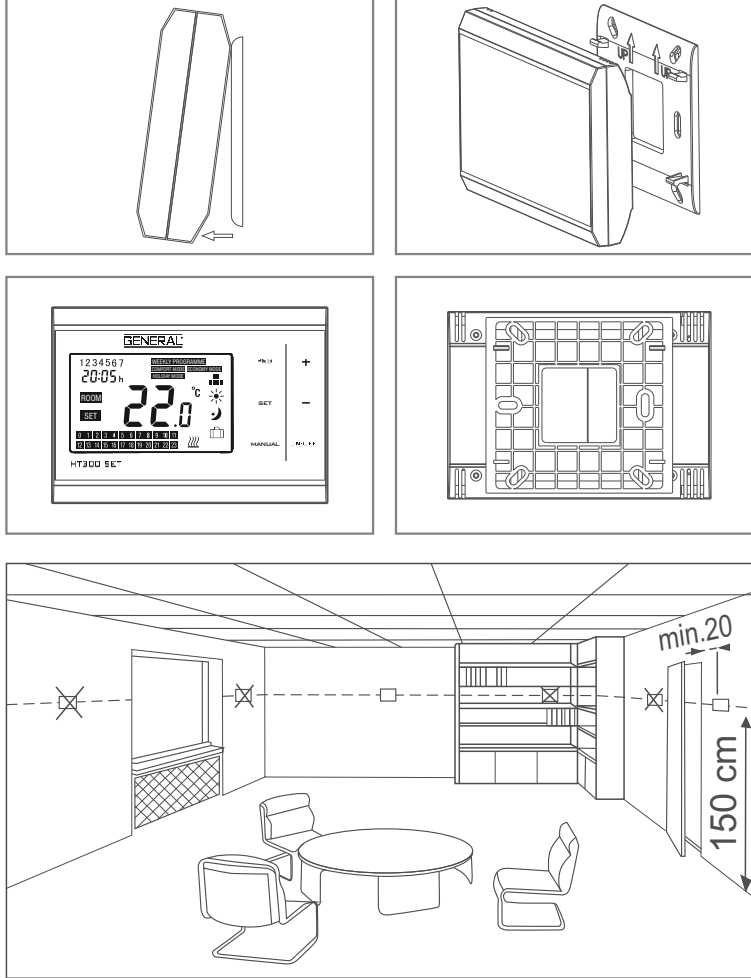

The thermostat should be mounted on a flat wall.

Please comply the local electric regulations.

The membrane is filled with eco-friendly gas.

Termostat gövdesi plastik malzemeden üretilmiştir.

If there is any thermostatic radiator valve in the reference room, keep all of them open.

## Heating Calibration

- Press “**Manual**” button while the device is off.
- SET the temperature difference by pressing “+” and “-” buttons in order to see required temperature. This value can be set between -8 and +8.
- Press “**Manual**” and exit the menu.

**Warning:** Recommended temperature calibration is “0.0”.

## Technical Data

### Operational Data

#### Switching Capacity

#### Voltage

DC 3 V (2 × 1,5V AAA Alkaline battery)

#### Relay operating voltage

3 V (DC)

#### Relay operating current

10 A (SPDT)

#### Differential SD Switching

0.5 °C

#### Required Setting Range

5...30 °C

#### Increments

0.5 °C

#### Battery Life

1 year (AAA Alkaline Battery)

### Environmental conditions

#### Operation

sınıf 3K5

#### Climate conditions

0...+50 °C

#### Temperature

<95 % r.h.

#### Moisture

normal

#### Pollution degree

#### Transport Storage

sınıf 2K3/1K3

#### Climate conditions class

-25...+60 °C

#### Temperature

<95 % r.h.

#### Moisture

sınıf 2M2

#### Mechanical conditions

### Norms and Standards

#### Standards

CE conformity

#### Screw Terminals

2×1.5 mm<sup>2</sup> ya da 1×2.5 mm<sup>2</sup> min.(0.5 mm<sup>2</sup>)

#### Color

White

### Receiver

#### Operating Voltage

230 V+ %10/-%15 (AC)

#### Frequency

45-65 Hz

#### Relay Operating Voltage


12 V (DC)

#### Relay Operating Current


10 A (SPDT)

HT 300 SET WIRING DIAGRAM

WIRING DIAGRAM FOR HEATING UNITS

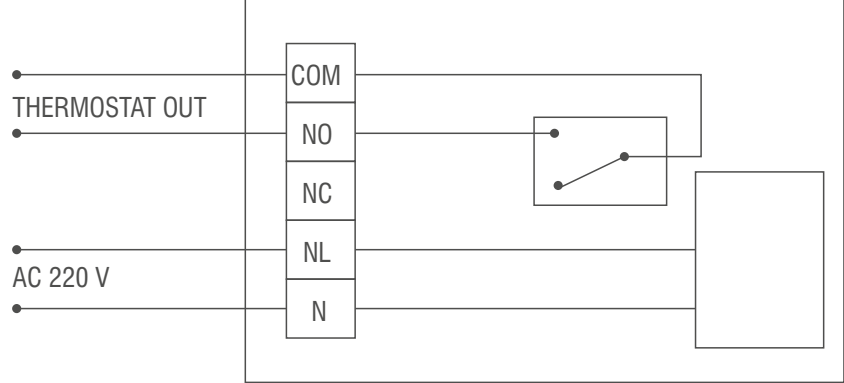

WIRING DIAGRAM FOR COOLING UNITS

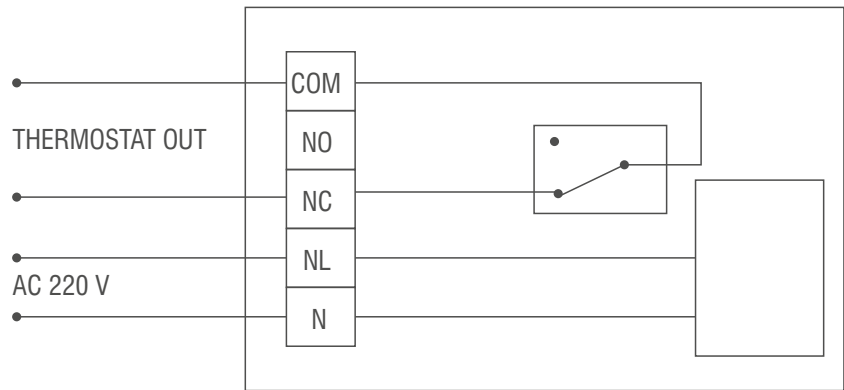

Sizes

Thermostat Size  
134 mm×94mm×28mm

