




www.deltadore.com

AUTO

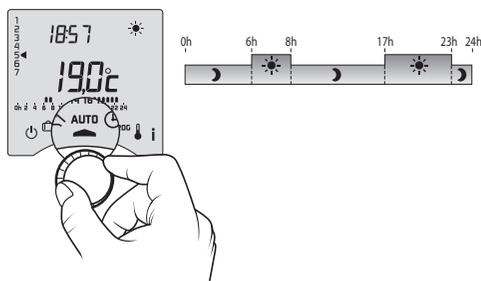


Turn the selector dial to AUTO. Your thermostat follows the programme.

Depending on the configuration during installation, your device will constantly display the temperature setting or the room temperature. To change these settings, refer to the »installation guide« or contact your installation engineer.

Information button


In AUTO mode, pressing the i button displays the room temperature or the temperature setting, depending on the configuration during installation.

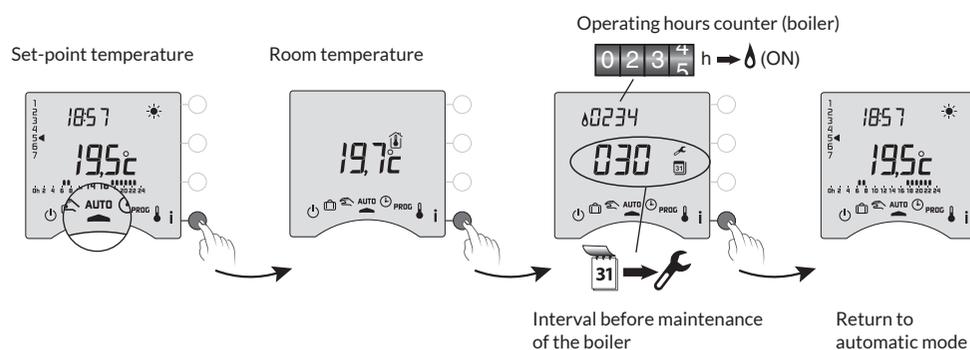


Important product information (4)



Time setting

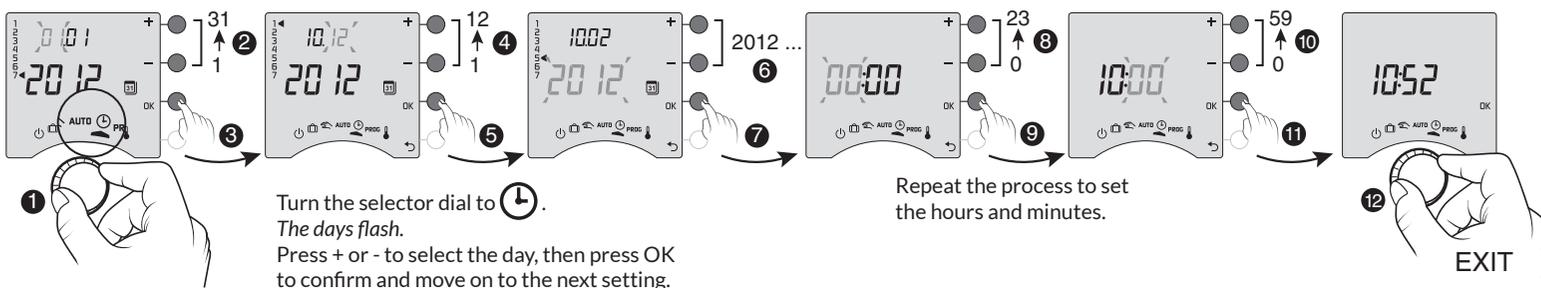

Set-point Temperature Setting

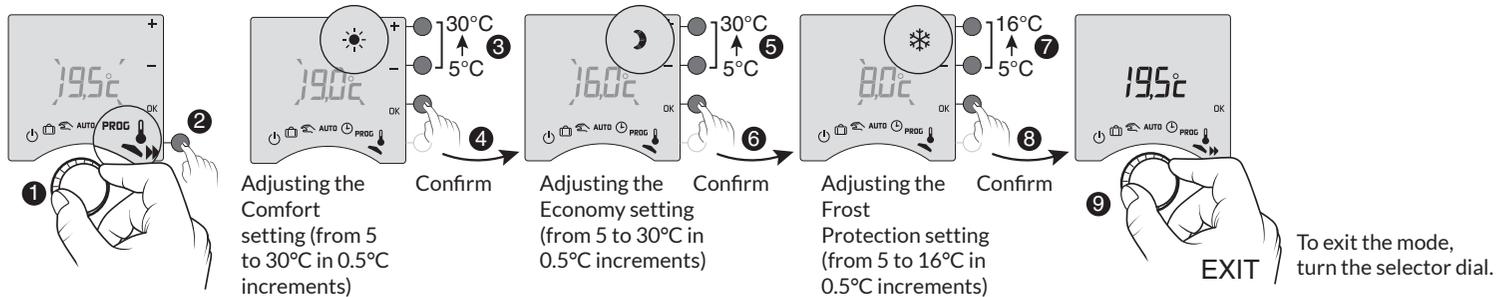

> 5s Press time


Room temperature

Set-point temperature

PROG x1 Daily programming

PROG x7 Weekly programming

Manual mode

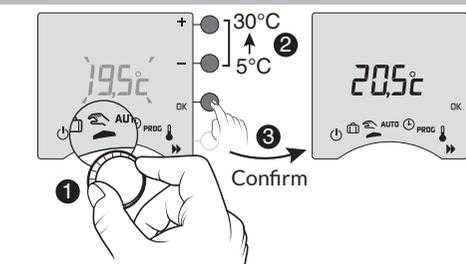

This mode is used to choose a set-point temperature that remains constant. Turn the selector dial to .

To cancel the current manual mode, turn the selector dial.


Override



In automatic mode, manual override can be used to switch from Comfort to Economy (or vice versa) until the next change of programme

E.g.: it is 15:30 and you would like to switch to Comfort mode before the set time (17:00).

Press the button

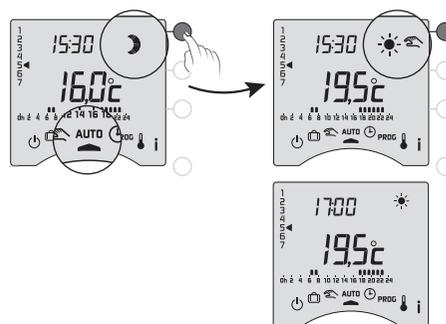

If you wish to cancel the override that is currently active, press the button again. At 5pm, the programme will return to the normal schedule.

PROG


Turn the selector dial to PROG.

1. Create your 24-hour programme



Press the buttons or to create your different Economy or Comfort periods.

The programme may be weekly (PROGx7) or daily (PROGx1). This choice is made using the switch on the back of the device. This programming can also be done in one-hour, half-hour, or quarter-hour stages. If you wish to change these settings, refer to the «installation guide» or contact your installation engineer.

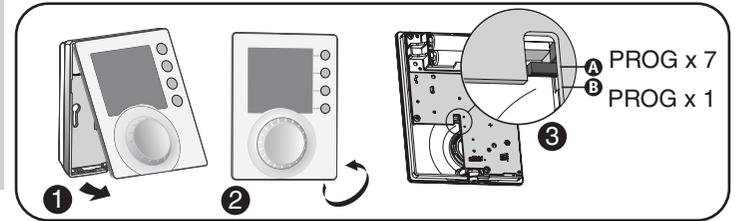

Example : Comfort from 6:00 to 8:00 and from 17:00 to 23:00

PROG x1

Setback period
Press until 06.00.

Comfort period
Press until 08.00.

Press until 17.00.

Press until 23.00.

Press until 00.00.

Confirm To exit the mode, turn the selector dial.

Confirm and continue on to the next day to program it separately or confirm the program and copy it to the next day.

PROG x7

Press until 06.00.

Press until 08.00.

Press until 17.00.

Press until 23.00.

Press until 00.00.

Repeat for each day of the week.

Confirm OR >3s COPY

EXIT To exit the mode, turn the selector dial.

2. Check your program

Press to check the Comfort and Economy periods you have created. Press OK to check the next day.

The programme begins on day 1 (Monday) and at 00:00.
1 : Monday,
•
•
•
7 : Sunday,

The programming may be done in increments of one hour, 30 minutes, or 15 minutes (refer to the "installation guide", menu 1-02).

PROG

V	10
S	11
D	12
L	13
M	14
M	15
J	16
V	17
S	18
D	19

This mode protects your home from frost if you are absent for several days. Turn the selector dial and enter the return date.

Enter the return date

The Frost Protection setting is adjustable (§ «Setting temperatures»).

Confirm


Confirm

Confirm

Return to AUTO mode at the end of the countdown, at 00:00.

To change the mode in progress, press OK again.
To cancel the current absence mode, turn the selector dial.


TEMP

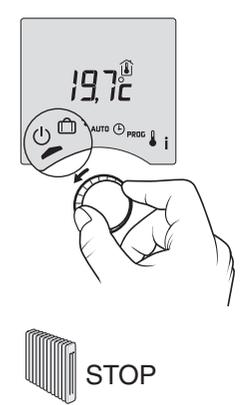

This mode is used to switch your heating installation off. Turn the selector dial to . In this mode, the device displays the room temperature.

BATT

When the batteries symbol appears, you have approximately 1 month to change the batteries (2.15 V LR03 or AAA alkaline batteries).

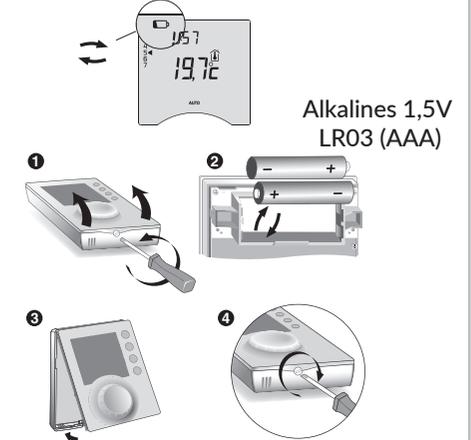

You have approximately 30 seconds to change the batteries before the time setting is reset (if this happens, reprogramme the date and time).