



Set Temperature Range	5-35°C, 41-95°F	Frost Protection (7°C - 17°C)	Y
Cool White Back Lit Screen	Y	Daylight Saving Time (DST)	Y
Non-Programmable Mode	Y	°C / °F Option	Y
5/2 Day Programming Mode	Y	Built In Air Sensor	Y
7 Day Programming Mode	Y	Remote Air Sensing Mode	N
24 Hour Mode	Y	Floor Sensing Mode	Y
Number of Heating Levels	4 or 6	Remote Probe Included	Y
Advance Function	N	Floor Temp Limit Protection	Y
Optimum Start	Y	Logo	Unbranded
Number of Switching Times (Timer mode)	4	Max Switching Current	16A
Holiday Function	Y	Modbus	N
Keylock Function	Y	Accuracy +/-	1°C
Temperature Hold Function	Y	Adjustable Switching Differential	0.5°C - 3°C
Temperature Override	Y	Supply	230V AC
Temperature Override Limit	Y	Installed Dimensions	86x86x13mm (L,H,D)
Output Delay	Y	Weight	150g


Feature Table - Thermostat Mode

FEATURE	DESCRIPTION	SETTING	FEATURE	DESCRIPTION	SETTING
01	Temperature Format	00 = °C, 01 = °F (00 = Default)	07	Optimum Start	00 = Disabled (Default) 01 = 1 Hour 02 = 2 Hours 03 = 3 Hours 04 = 4 Hours 05 = 5 Hours
02	Switching Differential	00 = 0.5°C, 01 = 1.0°C (Default) 02 = 2.0°C, 03 = 3.0°C	08	Rate of Change	Minutes to raise by 1°C
03	Output Delay	00 - 15 Minutes (00 = Default)	09	Program Mode	00 = Non-Programmable, 01 = Weekday/Weekend (Default), 02 = 7 Day Programming, 03 = 24 Hour Mode
04	Up/Down Temperature Limit	00° - 10°C (00° = Default)	10	(DST) Daylight Saving	00 = Disabled (Default) 01 = Enabled
05	Sensor Selection	00 = Built in Sensor (00 = Default) 01 = Floor Sensor Only 02 = Built in Sensor with Floor Sensor	11	Program Type	00 = 4 Comfort Levels (Default) 01 = 6 Comfort Levels
06	Floor Temperature Limit	Up/Down Temperature Limit			

Feature Table - Timer Mode

01	Program Mode	00 = Non-Programmable, 01 = Weekday/Weekend (Default), 02 = 7 Day Programming, 03 = 24 Hour Mode
02	Daylight Saving Time (DST)	00 = Disabled (Default) 01 = Enabled

Product Dimensions (mm) & Wiring Specification

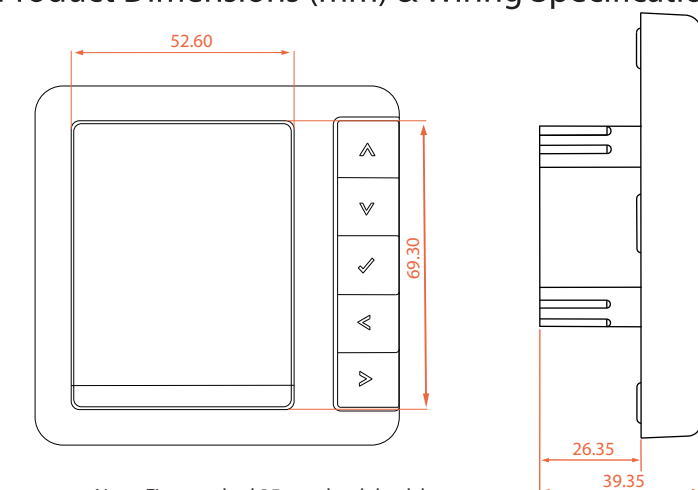

Note: Fits standard 35mm depth back box

